



Troubleshooting

Top View

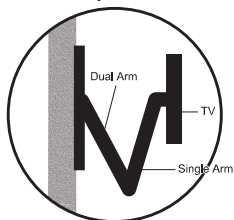

Extend both arm segments equally to keep the screen centered, leveled, and to balance the weight of the screen properly.

Top View

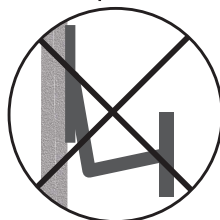


Extending the single arm segment alone can result in the weight of the screen pulling the end of the arm down, causing the screen to no longer be level and to sag slightly.

MOUNT-IT!

Installation Manual

SKU: MI-393L

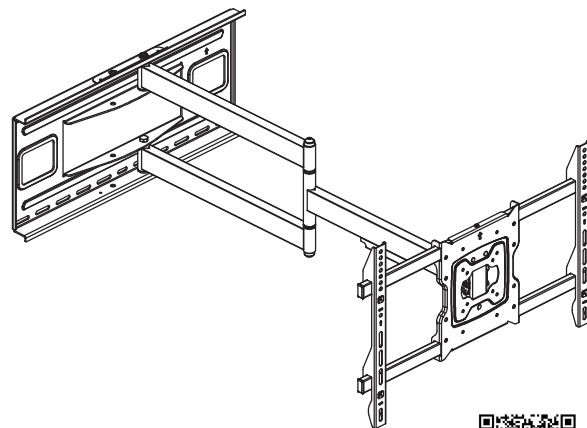

Scan this QR code for product information, videos, and assembly assistance.

Visit us at www.mount-it.com for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.

Available by phone **Monday - Friday from 8:00am to 4:00pm PST.**

Chat live with an agent on our website!



support@mount-it.com



(855) 925-5668



www.mount-it.com

FULL MOTION TV WALL MOUNT WITH 40-INCH EXTENSION



HAVE QUESTIONS?

Monday - Friday from 8:00am - 4:00pm PST



support@mount-it.com



(855) 925-5668



www.mount-it.com

Thank you for choosing Mount-It!

- EN** Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact Mount-It for assistance.
- CAUTION:** Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
 - Safety gear and proper tools must be used. This product should only be installed by professionals.
 - This product is designed to be installed on solid concrete walls, masonry walls or wood stud walls.
 - Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
 - Use the mounting screws to be installed in the "MOUNTING" section of this manual.
 - This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
 - This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- IMPORTANT:** Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact Mount-It for a replacement.
- MAINTENANCE:** Check that the product is secure and safe to use at regular intervals (at least every three months).

- DE** Lesen Sie die gesamte Bedienungsanleitung, bevor Sie mit der Installation und Montage beginnen. Wenn Sie Fragen zur Anleitung oder Warnungen haben, wenden Sie sich bitte an Ihren Händler.
- WICHTIG:** Die Verwendung mit Produkten, die schwerer als die angegebenen Nenngewichte sind, kann zu Instabilität führen und zu möglichen Verletzungen führen.
- Bitte befolgen Sie die Montageanleitung genau. Eine unsachgemäße Installation kann zu Schäden oder schweren Verletzungen führen.
 - Sicherheitsausrüstung und geeignete Werkzeuge müssen verwendet werden. Dieses Produkt sollte nur von Fachleuten installiert werden.
 - Dieses Produkt ist nur für massiven Betonwänden oder Mauerwerkswänden zu montieren.
 - Stellen Sie sicher, dass die Aufhängesurface das Gesamtgewicht des Geräts und aller angeschlossenen Hardware und Komponenten sicher trägt.
 - Verwenden Sie die mitgelieferten Befestigungsschrauben und die Befestigungsschrauben NICHT ZUFEST ANZIEHEN.
 - Dieses Produkt enthält Kleinteile, die beim Verschlucken eine Erstickungsgefahr darstellen können. Halten Sie diese Gegenstände von Kindern fern.
 - Dieses Produkt ist nur für den Innenbereich bestimmt. Die Verwendung dieses Produkts im Freien kann zu Produktversagen und Verletzungen führen.
- WICHTIG:** Stellen Sie vor der Installation sicher, dass Sie alle Teile gemäß der Komponente-Checkliste erhalten haben. Sie beschädigten oder fehlenden Teile, wenden Sie sich an Ihren Verkaufsstand, um Ersatz zu erhalten.
- WARTUNG:** Überprüfen Sie das Produkt in regelmäßigen Abständen auf Sicherheit und Stabilität (am besten alle drei Monate).


- FR** Lire attentivement le guide d'utilisateur avant de commencer l'installation et le montage. Si vous avez des questions concernant les instructions ou les avertissements, veuillez contacter votre distributeur local pour une assistance.
- ATTENTION:** L'utilisation de produits plus lourds que les poids maximaux indiqués peut entraîner une instabilité causant des blessures potentielles.
- Les supports doivent être joints comme spécifié dans les instructions de montage. Une mauvaise installation peut entraîner des dommages ou de graves blessures aux personnes.
 - Un équipement de sécurité et les outils appropriés doivent être utilisés. Ce produit devrait être installé uniquement par des professionnels.
 - Ce produit est conçu pour être installé sur des murs avec profils en bois, des murs en béton massif ou murs en brique.
 - Assurez-vous que la surface de soutien supporte en sécurité la poids combiné de l'équipement et de tous les matériaux et composants associés.
 - Utilisez les vis de montage fournies et NE SERREZ PAS TROP les vis de montage.
 - Ce produit contient de petites pièces qui peuvent causer un étouffement si elles sont avalées. Éloignez ces pièces des enfants.
 - Ce produit est prévu uniquement pour une utilisation à l'intérieur. L'utilisation de ce produit à l'extérieur peut entraîner une détérioration du produit ou des blessures aux personnes.

- IMPORTANT:** Avant l'installation, assurez-vous que vous avez reçu toutes les pièces selon la liste de vérification des composants. Si une pièce est manquante ou endommagée, téléphonez à votre distributeur local pour qu'il le remplace.
- MAINTENANCE:** A intervalles réguliers (au moins tous les trois mois) vérifiez que le support est d'utilisation sûre et stable.
- RU** Тщательно прочтите и будьте внимательны при установке. Если у Вас возникли какие-либо вопросы относительно инструкции или предупреждений, обратитесь к Вашему местному дистрибутору для получения помощи.
- ВНИМАНИЕ:** Использование продукта, вес которого превышает указанный максимальный вес, может привести к неустойчивости и возможным травмам.
- Всегда строго следуйте инструкции, не делайте никаких изменений. Неправильная установка может привести к получению серьезных травм.
 - Необходимо использовать предостерегающее устройство с официальными инструментами. Этот продукт должен устанавливаться только профессионалами.
 - Этот продукт предназначен для установки на прочные кирпичные стены, твердые бетонные стены или деревянные стены.
 - Убедитесь, что несущая поверхность выдержит все веса установленного оборудования и комплектации.
 - Необходимо использовать прилагаемые винты, закручивая и скручивая винты, НЕ ПЕРЕТЯГИВАЙТЕ винты.
 - Данный продукт содержит мелкие детали, которые представляют опасность удушья или при проглатывании. Такие детали необходимо хранить в недоступном для детей месте.
 - Данный продукт предназначен только для внутреннего использования. Использование данного продукта на улице может привести к повреждению продукта и возможным травмам.
- ВАЖНО:** Проверьте наличие деталей, что Вы получили все детали в соответствии со списком комплектации. Если не хватает каких-либо деталей или они повреждены, свяжитесь с Вашим местным дистрибутором для замены.
- ТЕХНИЧЕСКОЕ ОБСЛУЖИВАНИЕ:** Необходимо регулярно проверять (не реже, чем раз в три месяца) надежность конструкции и ее устойчивость при эксплуатации.


- ES** Lea todo el manual de instrucciones antes de comenzar la instalación y montaje de la unidad. Si tiene alguna inquietud con respecto a las instrucciones o advertencias, comuníquese con su distribuidor local.
- PRECAUCIÓN:** Utilizar con productos de mayor peso al indicado en los límites de peso por el soporte instalado y posibles heridas personales.
- Lea siempre detenidamente todo el manual de instrucciones de montaje. Una incorrecta instalación podría ocasionar daños a la unidad y lesiones personales.
 - Utilice los herramientas y equipo de seguridad adecuados. Este producto solo debe ser instalado por profesionales.
 - Este producto está diseñado para ser instalado en paredes sólidas de concreto, muros de ladrillo o muros de bloques.
 - Asegúrese de que la superficie de soporte soportará en seguridad el peso total de equipo y todos sus componentes y hardware.
 - Utilice los tornillos de montaje suministrados y NO ajuste demasiado fuerte a los tornillos.
 - Este producto contiene piezas pequeñas que representan un riesgo si se las traga. Mantenga estas piezas fuera del alcance de los niños.
 - Este producto está diseñado para ser usado únicamente en interiores. Utilizar este producto en exteriores podría ocasionar daños a la unidad y lesiones personales.
- IMPORTANTE:** Asegúrese de que haya recibido todas las piezas según la lista de verificación de componentes para la instalación. Si falta alguna de las partes, o está dañada, comuníquese con su distribuidor.
- MANUTENCIÓN:** Compruebe periódicamente que el soporte está asegurado y listo para usar (al menos cada tres meses).

- PT** Leia todo o manual de instruções antes de iniciar a instalação e montagem. Se você tiver alguma dúvida sobre qualquer uma das instruções ou avisos, entre em contato com o seu distribuidor local para assistência.
- ATENÇÃO:** O uso com produtos mais pesados do que os pesos indicados pode resultar em instabilidade, causando possíveis danos.
- Os suportes devem ser anexados como especificado nas instruções de montagem. A instalação incorreta pode causar danos ou até mesmo lesões pessoais.
 - Equipamentos de segurança e ferramentas adequadas devem ser utilizadas. Este produto só deve ser instalado por profissionais.
 - Este produto é projetado para ser instalado em paredes verticais de paredes de madeira, paredes de concreto sólido ou de tijolos.
 - Certifique-se de que a superfície de suporte suportará com segurança o peso combinado do equipamento e todos os materiais e componentes associados.
 - Use os parafusos de montagem fornecidos e NÃO APERTE EXCESSIVAMENTE os mesmos.
 - Este produto contém pequenas peças que podem causar asfixia se ingeridas. Mantenha essas peças longe do alcance de crianças.
 - Este produto destina-se somente para uso interno. Usá-lo em ambiente externo pode causar falhas no produto e lesões pessoais.
- IMPORTANTE:** Asegure-se que você recebeu todas as peças de acordo com a lista de componentes, antes da instalação. Se alguma peça estiver faltando ou é defeituosa, contate o seu distribuidor local para substituição.
- MANUTENÇÃO:** Certifique-se que o suporte seja seguro e protegido para o uso em intervalos regulares (pelo menos a cada três meses).


PACKAGE CONTENTS

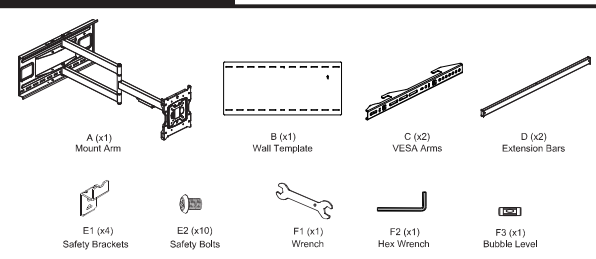

TV MOUNTING HARDWARE

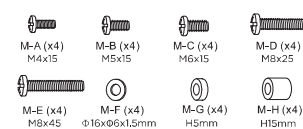

WALL MOUNTING HARDWARE

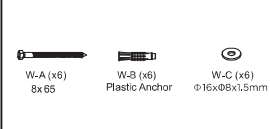


Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct mounting hardware suitable for your installation.

CHOKING HAZARD. Package includes small parts. Not for children under 3 years. Adult supervision is required.

Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.

DIMENSIONS & WEIGHT CAPACITY

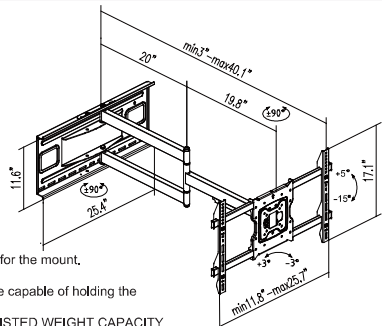

Rated weight capacity is 110lbs for the mount.


Caution: Ensure all mounting surfaces are capable of holding the weight of your mount. DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!



Step 1

Remove the Bars





Slide the Extension Bars (#D) out from the VESA plate, remove and dispose of the plastic bags.

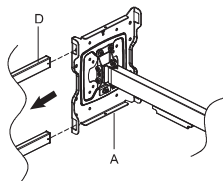

Step 2

A. Wood Stud Mounting Option






- With a stud finder locate the stud and center the mount on the stud at the desired height. Using a bubble level to ensure straightness, hold the Template (#B) to the wall and mark the center of the 4 mounting holes with a pencil as shown here.
- Use a 7/32" drill bit and drill on the marked locations to a depth of 2.6". Secure the Mount Arm (#A) to the wall using Lag Screws (#W-A) and Washers (#W-C). Tighten the screws until secure.

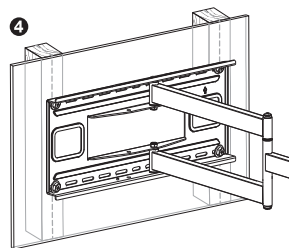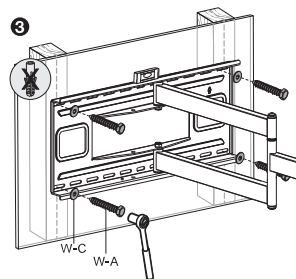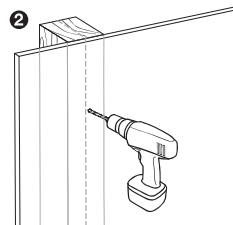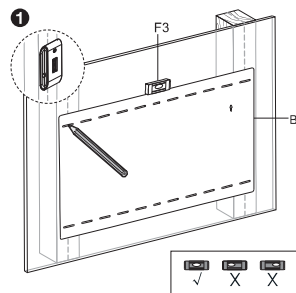

B. Concrete/Brick Mounting Option

- Using a bubble level to ensure straightness, hold the Template (#B) to the desired location on the wall and mark the center of the 6 mounting holes with a pencil as shown here.
- Use a 3/8" drill bit and drill on the marked locations to a depth of 2.6". Clear any dust and debris from the holes and insert the Concrete Anchors (#W-B). Secure the Mount Arm (#A) to the wall using Lag Bolts (#W-A) and Washers (W-C). Tighten the screws until secure.

 Note: Do not drill mounting holes into mortar (such as between bricks or stones) only drill and install into solid stone or concrete surfaces.

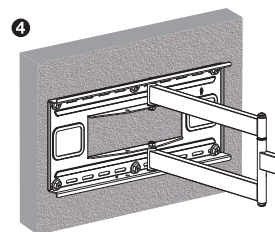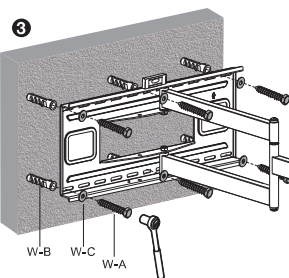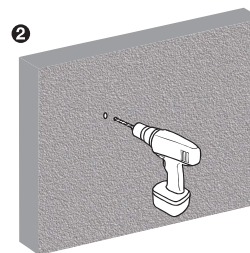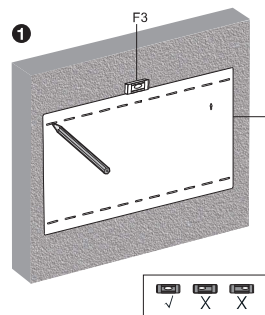


Step 3a

A. Installing The TV To The Mount


Attaching the TV to the Mount (For Displays With Smaller Bolt Hole Patterns)

For TVs with smaller bolt hole patterns of VESA 75x75, 100x100, 100x200, 200x100 and 200x200mm, the TV can be mounted directly on the plate, without the extension bars.

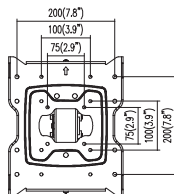


1. Take Off The VESA Plate

Remove the VESA Plate from the end of the Mount Arm (#A) by partially loosening the top 2 nuts shown here on the rear of the plate, removing the lower nut, then lifting the plate off the end of the arm.

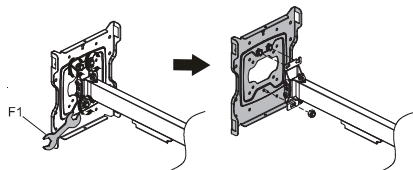


2 Attach VESA Plate to TV

- Lay your TV down on a flat surface and align the VESA Plate over the VESA holes as shown.
- Select the appropriate size mounting bolt (#M-A through M-E) and washer (#M-F) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information. If necessary, use the included spacers (#M-G, M-H) between the mount and the TV to adjust the length of the mounting bolt. Multiple spacers can be used in combination to achieve the desired bolt depth. Attach the VESA plate using the selected hardware.

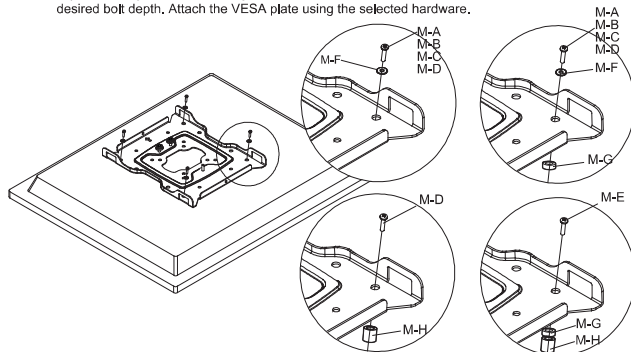

3 Attach VESA Plate to Arms

1. Hang the VESA plate onto the end of the Mount Arm.
2. Use the Bubble Level (#F3) to level the TV, then tighten the upper 2 nuts.
3. Reinstall and tighten the lower nut.

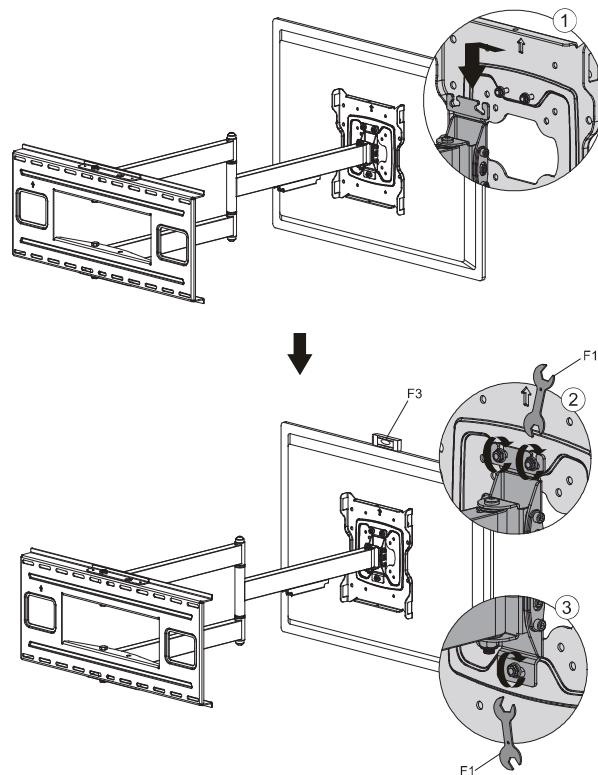


Step 3b

B. Installing The TV To The Mount

Attaching the TV to the Mount (For Displays With Larger Bolt Hole Patterns)
For TVs with larger bolt hole patterns of VESA 300x300,400x200,400x400,600x400, use the TV brackets and the extension bars to install the TV to the mount.


1. Attach VESA Arms to TV

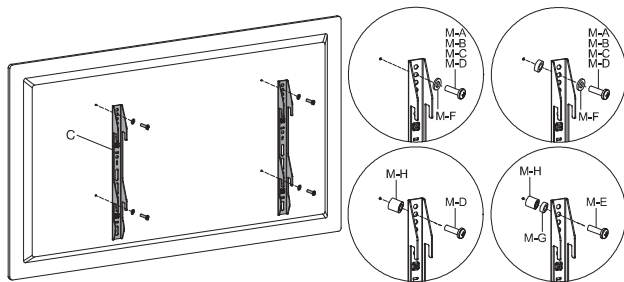

• Lay your TV down on a flat surface and align VESA Arms (#C) over the VESA holes as shown. Select the appropriate size mounting bolt (#M-A through M-E) and washer (#M-F) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information. If necessary, use the included spacers (#M-G, M-H) between the mount and the TV to adjust the length of the mounting bolt. Multiple spacers can be used in combination to achieve the desired bolt depth. Attach the VESA Brackets using the selected hardware in the matching configuration shown here.

2. Insert the Extension Bars

• Slide the Extension Bars (#D) into the VESA Plate.

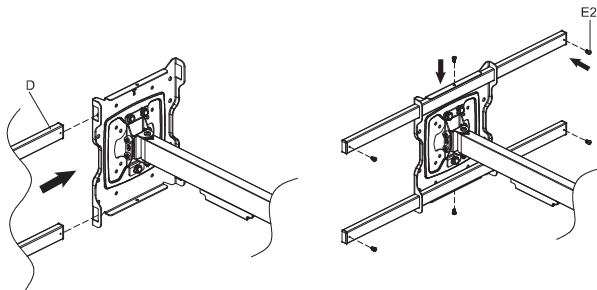


3. Install the Safety Bolts


• Install the Safety Bolts (#E2) into the 6 locations shown here to secure the bars in position.

4. Hanging TV On The Wall Mount Arms

• Lift the TV up (two persons recommended) and hang the TV brackets on to the wall mount extension bars.

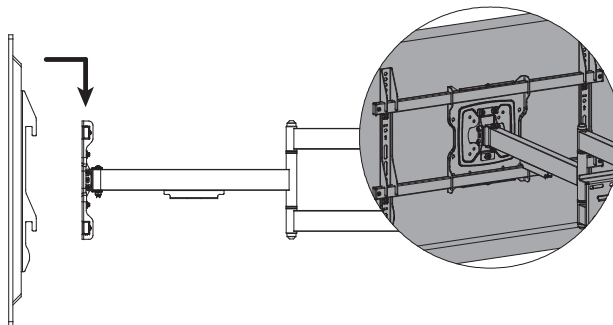

5. Securing The TV On The Mount

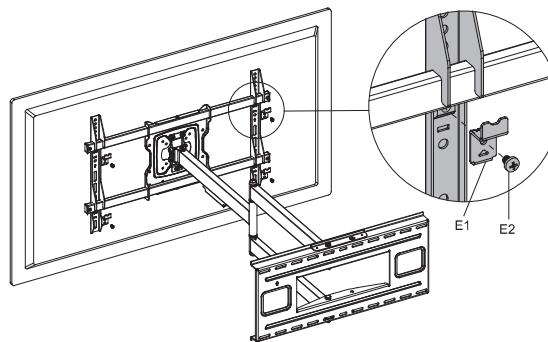


Secure the TV brackets on the mount by attaching the 4 x E1 Safety Brackets with 4 x E2 Bolts as shown on the image.

NOTE: Failure to secure the TV brackets to the mount with E1 Safety Brackets may result in accidental lift off of the TV from the extension bars, possibly resulting in bodily or property damage.

Step 4

Cable Management and Angle Adjustment

- Route cables through the Cable Clips on the bottom of the mount arm. Ensure enough slack is left in the cords for the full range of movement of the mount arm.
- Adjust the tilt angle of the screen by loosening the bolts shown in the magnification bubble (#1) using the Hex Wrench (#F2). Tilt the screen to the desired angle then tighten the bolts back in place.
- Adjust the levelled angle of the screen by loosening the bolts shown in the magnification bubble (#2 & 3) using the Wrench (#F1). Level the screen to the desired angle by using the bubble level (#F3) then tighten the bolts back in place.

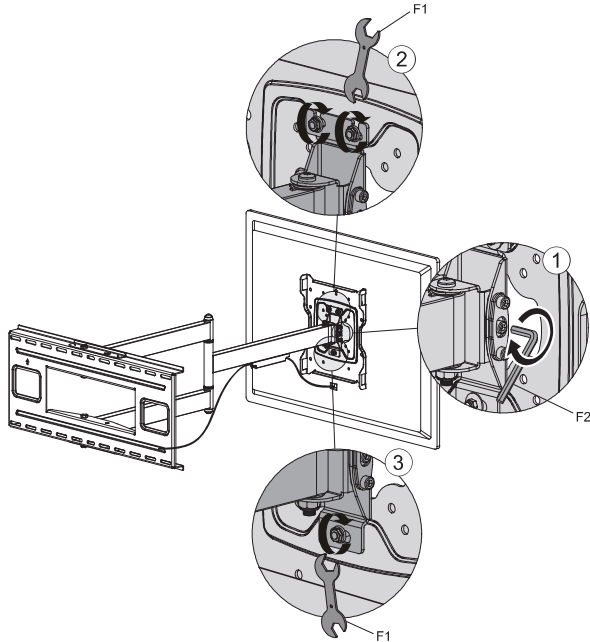

- The mount can be turned $\pm 90^\circ$ at each of the 3 arm joints, tilted $+5^\circ \sim -15^\circ$, swiveled $\pm 90^\circ$, and levelled horizontally $\pm 3^\circ$.

