 




4. Adjustment

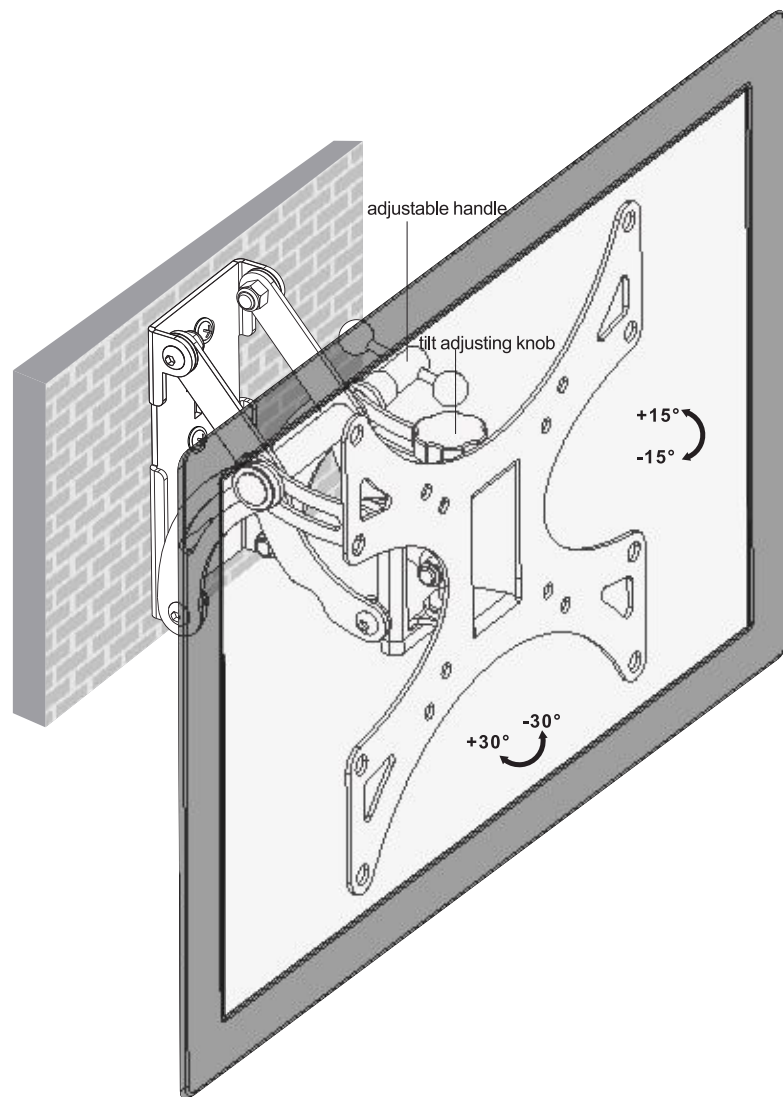

Use the tilt adjusting knob and adjustable handle to adjust your TV to obtain a desired angle.

 
Maintenance

- Check that the bracket is secure and safe to use at regular intervals(at least every three months).
- Please contact your distributor if you have any questions.

MOUNT-IT!

INSTALLATION MANUAL

LCD Wall Mount

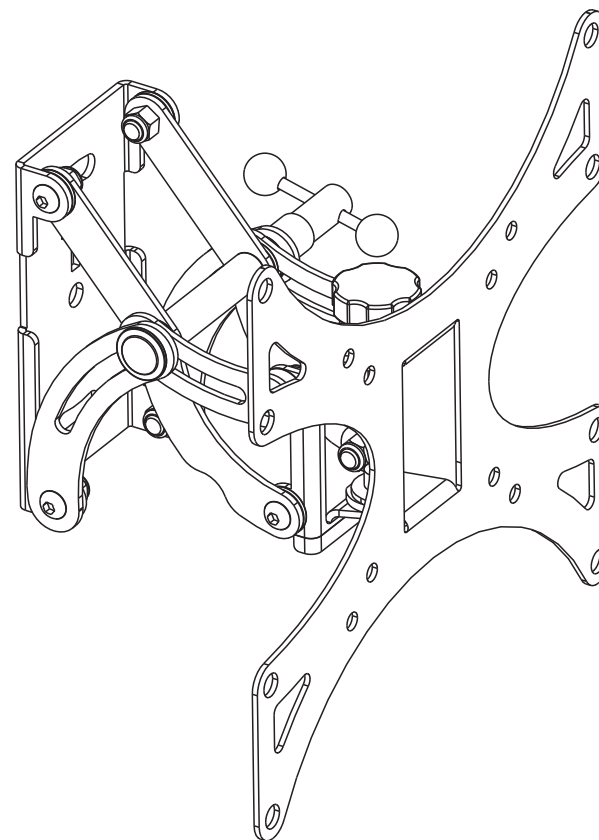

CAUTION: DO NOT EXCEED
RATED LISTED WEIGHT. SERIOUS
INJURY OR PROPERTY DAMAGE
MAY OCCUR!

MI-4601



75x75/100x100
200x100/200x200



30kg
(66lbs)
RATED

ISSUED: JUN. 2015

 
NOTE: Read the entire instruction manual before you start installation and assembly.

⚠ WARNING


- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised **ONLY** as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- If mounting to wood wall studs, make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

Component Checklist

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, telephone your local distributor for a replacement.

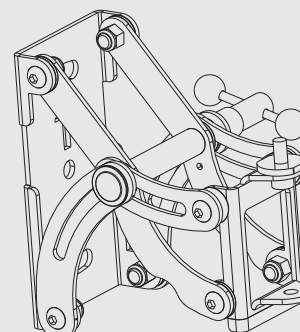

wall mount(x1)
A

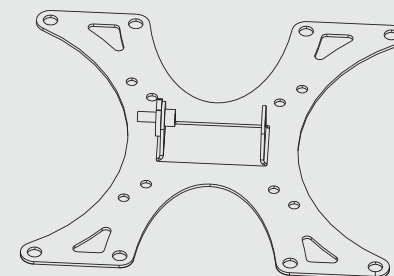 

adapter bracket (x1)
B

 


knob (x1)
C


Package M




M4x14 (x4)
M-A



M5x14 (x4)
M-B

 

M6x14 (x4)
M-C

 

M8x20 (x4)
M-D



D5 washer (x4)
M-E

 


D8 washer (x4)
M-F




small spacer (x8)
M-G

Package W



ST5.5x50 (x3)
W-A




 


concrete anchor (x3)
W-B




D6 washer (x3)
W-C

  
 
 
1a. For Wood Stud Wall Mounting

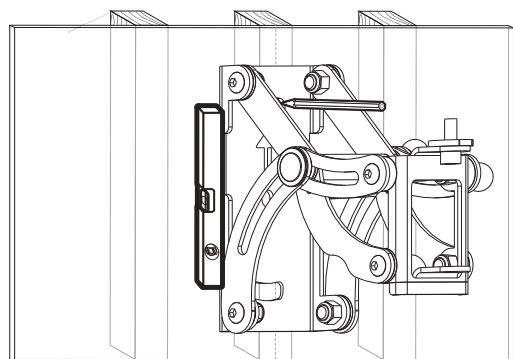

 Find and mark the exact location of mounting holes.



Drill pilot holes

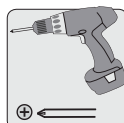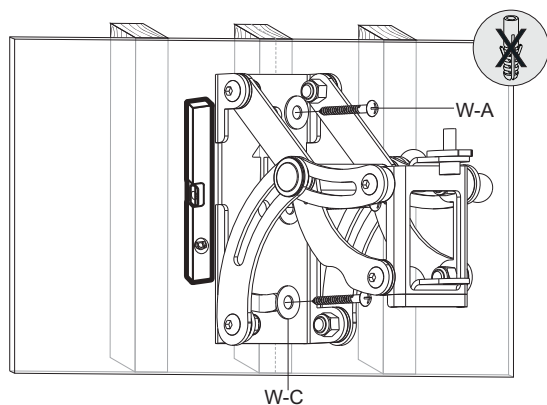   




Screw the wall mount onto the wall

With arrow pointing up


⚠ WARNING

- Make sure that mounting screws are anchored into the center of the studs. The use of a stud finder is highly recommended.
- Installers are responsible to provide hardware for other types of mounting situations.
- Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

 
 
 
1b. For Solid Brick and Concrete Mounting

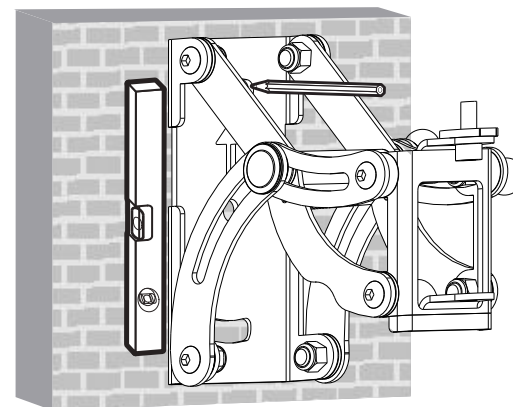

 Mark the exact location of mounting holes



Drill pilot holes

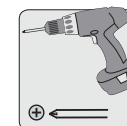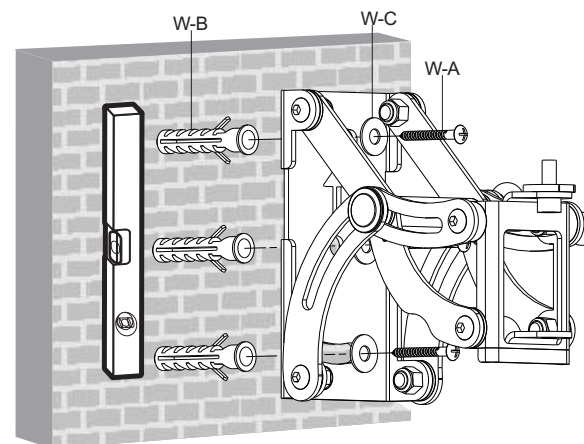   



Screw the wall mount onto the wall

With arrow pointing up




⚠ WARNING

Installers must verify that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.

  2. Installing the VESA Plate

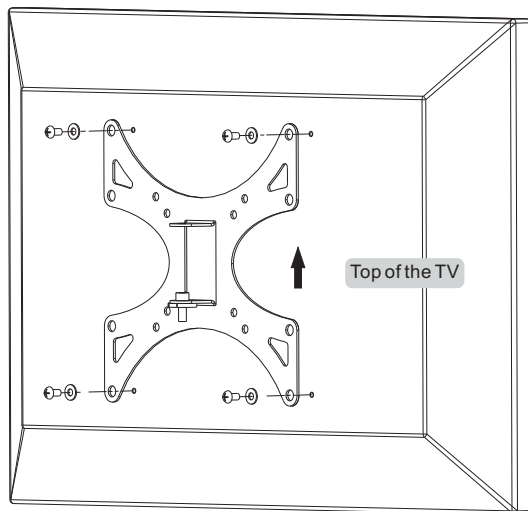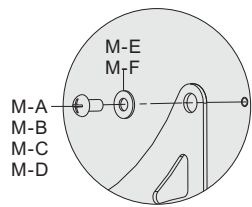

or

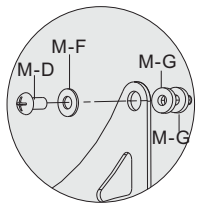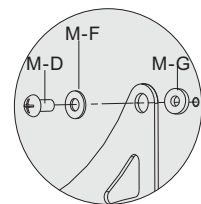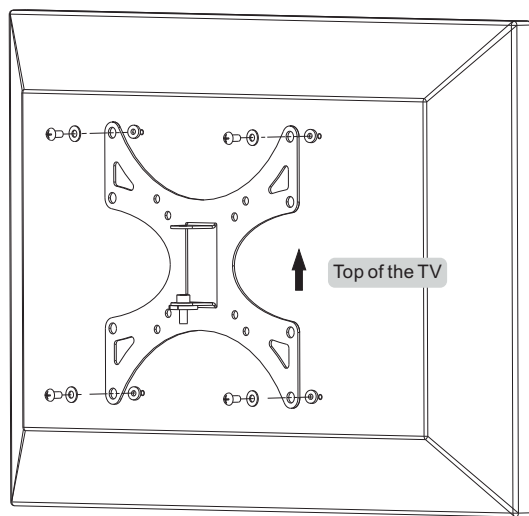   


Note: Choose the appropriate screws, washers and spacers (if necessary) according to the type of screen. Screw the VESA plate onto the TV.



Tighten all screws but do not over tighten.

 3. Hanging the TV onto the Wall Plate

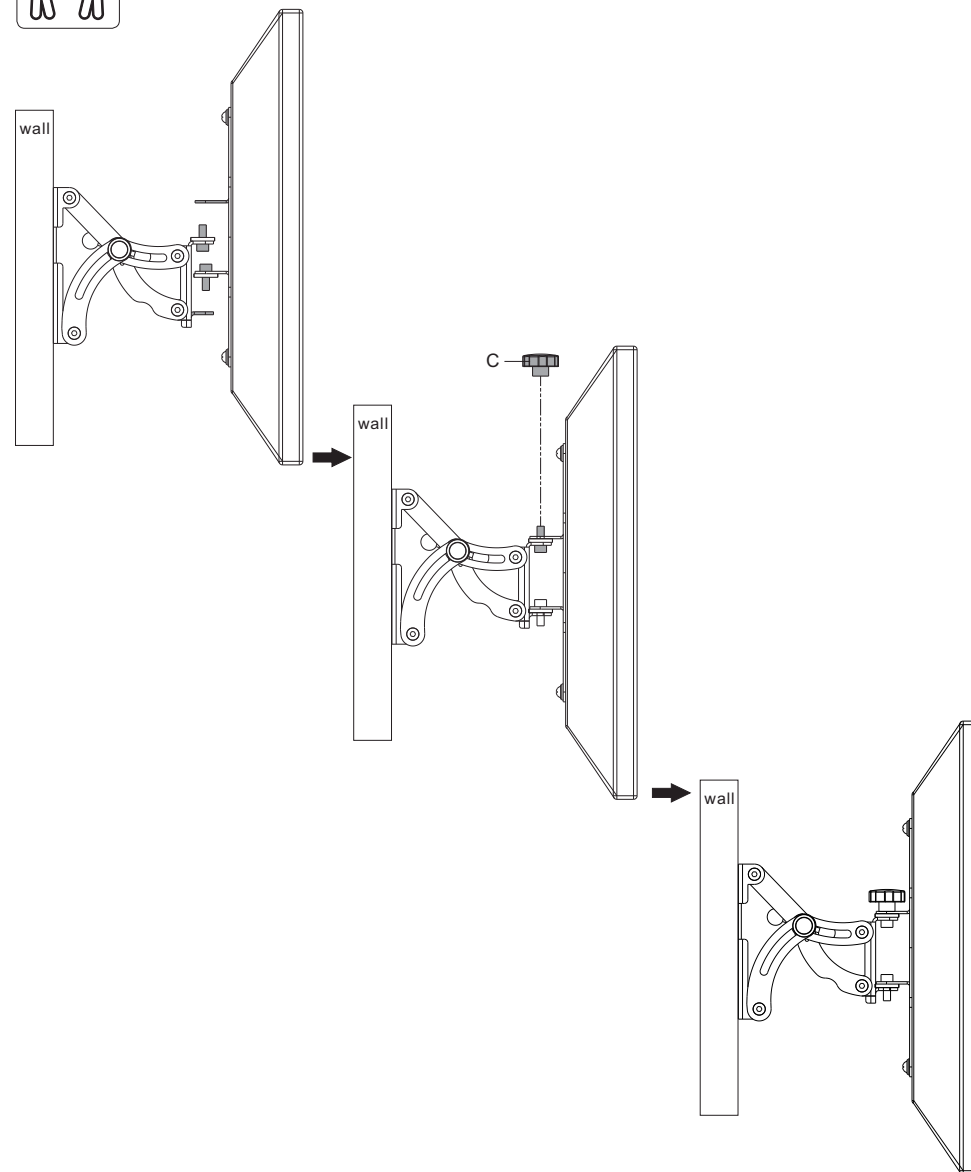

Place the TV onto the wall plate and align it to mounting holes, tighten the knob.

Important: Make sure the TV is correctly mounted and the knob is tightened before releasing TV.