


MOUNT-IT!

Installation Manual

SKU: MI-501L

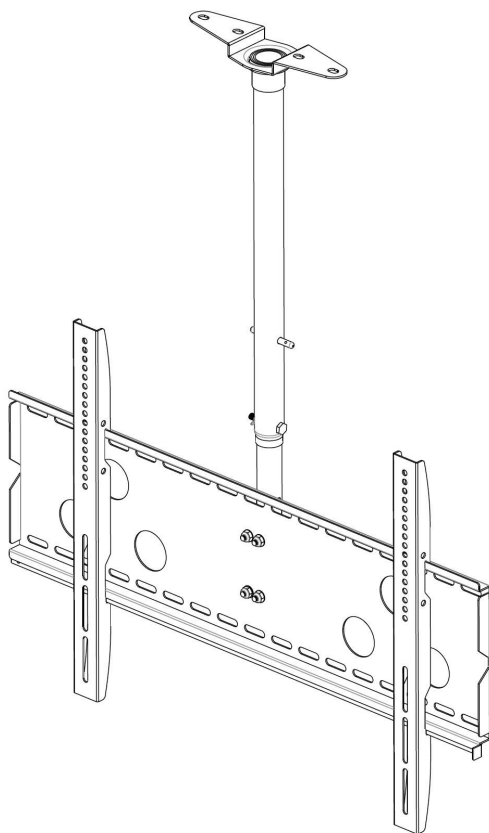

Mount-It! Full-Motion TV Ceiling Mount



HAVE QUESTIONS?

Monday - Friday from 8:00am - 4:00pm PST



support@mount-it.com



(855) 925-5668



www.mount-it.com

Thank you for choosing Mount-It!

UNPACKING INSTRUCTIONS

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

IMPORTANT SAFETY INFORMATION

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please call a qualified installation contractor for help if you:

- If you don't understand these directions or have any doubts about the safety of the installation.
- If you are uncertain about the nature of your wall, consult a qualified installation contractor.

Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any and all liability for injury or damage arising from incorrect assembly/incorrect mounting, or incorrect use of this product.



CAUTION: This TV mount must be securely attached to the ceiling. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.

TOOLS REQUIRED

- 5/32" (4mm) Drill Bit
- 3/8" (10mm) Masonry Bit
- Wrench or Socket Set
- Phillips Screwdriver
- Stud Finder
- Carpenter's Level

Note: The mounting components and hardware supplied in this package are not designed for installations to ceilings with steel studs. If the hardware you need for your installation is not included, please consult your local hardware store for proper mounting hardware for the application.

COMPATIBLE VESA SIZES 200x200 300x300 400x200 400x300 400x400 600x200 600x300 600x400 600x450 700x400 700x450 800x200 800x400 800x450	COMPATIBLE WITH SCREENS UP TO 80" MAX	220lbs RATED				
PACKAGE CONTENTS						
 A (x1) VESA Plate	 B (x2) VESA Bracket	 C (x1) Connector Bracket	 D (x1) Locking Bar			
 E (x4) Short Bolt	 F (x3) Long Bolt	 G (x10) M8 Washer	 H (x5) Nut			
 I (x2) Butterfly Nut	 J (x1) Clevis Pin	 K (x1) Pole Assembly	 L (x1) Ceiling Plate			
VESA HARDWARE						
 M (x4) M4 Spacer	 N (x8) 5mm M6/M8 Spacer	 O (x4) 20mm M6/M8 Spacer	 P (x4) M4 Washer	 Q (x4) M6 Washer	 R (x4) M8 Washer	
 S (x4) M4x12 Bolt	 T (x4) M4x30 Bolt	 U (x4) M6x20 Bolt	 V (x4) M6x35 Bolt	 W (x4) M8x20 Bolt	 X (x4) M8x35 Bolt	 Y (x4) M8x45 Bolt
CEILING MOUNTING HARDWARE						
 (x4) Lag Bolt Washer	 (x4) M6x90mm Lag Bolt	 (x4) M10x80mm Concrete Anchor				

Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct wall mounting and monitor mounting hardware suitable for your installation.


CHOKING HAZARD. Package includes small parts.
Not for children under 3 years. Adult supervision is required.

Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.


Step 1 Attaching the VESA Brackets to a TV




1.1 S/T/U/V/W/X/Y

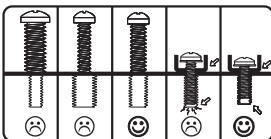

1.2 M/N/O

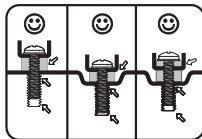

1.3

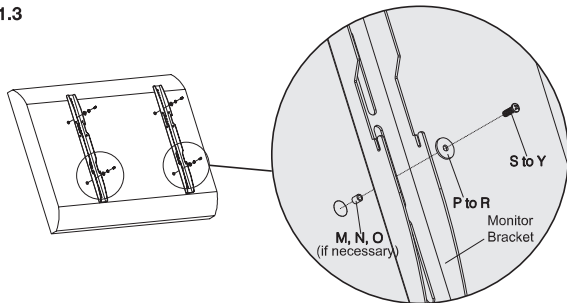



Select the appropriate size mounting bolt (#P-Y) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information. If necessary, use the included spacers (#M-O) between the mount and the TV as shown above to adjust the length of the mounting bolt. Multiple spacers can be used in combination to achieve the desired bolt depth. Connect the VESA Brackets (#B) to the back of your screen using the selected VESA bolts and/or spacers.




CAUTION: Using a bolt that is too long or too short will damage the TV and can cause serious injury due to improper TV to TV mount connection. Do not overtighten screws.

Step 2 Preparing the Mounting Surface


MOUNTING TO WOOD

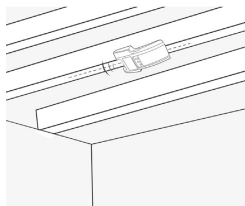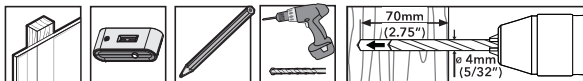

If your ceiling joists are behind drywall use a stud finder to locate the joist, and mark the center.

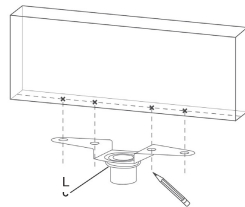



Center the ceiling plate (L) on the joist and mark the center of the mounting holes with a pencil.

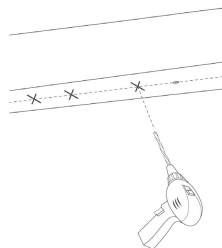


Using a 3/32" (4mm) bit drill holes in the marked locations to a depth of 2.75in (70mm).

Step 2 Preparing the Mounting Surface


MOUNTING TO CONCRETE OR BRICK

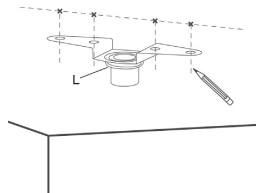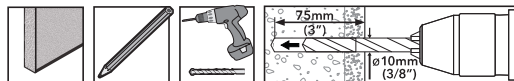

Center the ceiling plate (L) in the desired location and mark the center of the mounting holes with a pencil.

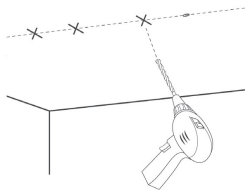


Using a 3/8" (10mm) bit drill holes in the marked locations to a depth of 3in (75mm).

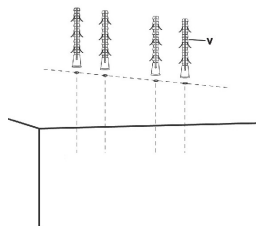


Insert a M10 x 80 Concrete Anchor into each hole until it is flush. If necessary, a hammer can be used to lightly tap each anchor into place until flush with the ceiling.

Step 3 Assembling the Ceiling Mount

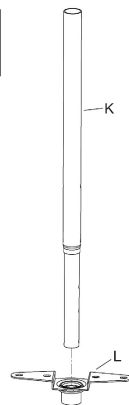

3.1


Insert the Pole Assembly (K) through the Ceiling Plate (L) and move it to the opposite end.

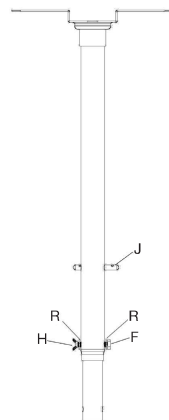

3.2


Locate the upper 2 holes (pictured here) through the Pole Assembly. Pass the Clevis Pin (J) through the lower hole and in the upper hole use 1 Long Bolt (F), 2 M8 Washer (R) with one on each side of the pole, and 1 Nut (H). This does not need to be tightened securely at this stage unless the height does not need to be adjusted, in which case tighten the nut until secure before connecting your TV to the mount.

Step 3 Assembling the Ceiling Mount

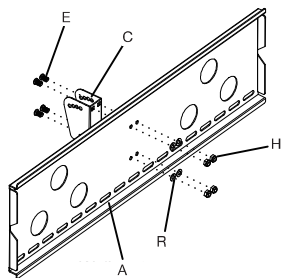

3.3

Attach the Connector Bracket (C) to the VESA Plate (A) using 4 Short Bolts (E) with 4 M8 Washers (R) and 4 Nuts (H) on the opposite side as shown.

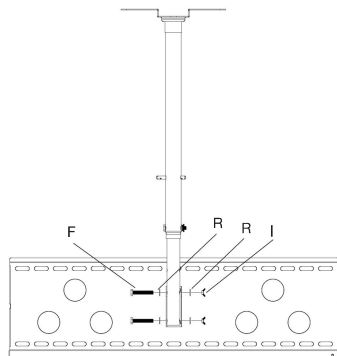


3.4


Attach the Connector Bracket and Pole Assembly using 2 Long Bolt (F) with 2 M8 Washers (R), secured on the opposite side with 2 more M8 Washers (R) and 2 Butterfly Nuts (I).

Step 4 Mounting the Ceiling Plate to the Ceiling


MOUNTING TO WOOD

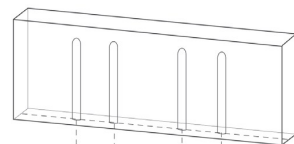


Attach the mount to the ceiling using the Lag Bolts and Lag Bolt Washers. Tighten until secure.

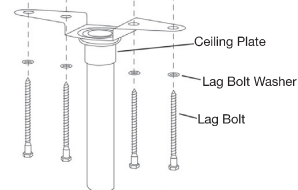


MOUNTING TO CONCRETE OR BRICK

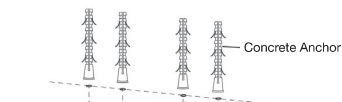

Attach the mount to the ceiling using the Lag Bolts and Lag Bolt Washers. Do not overtighten.

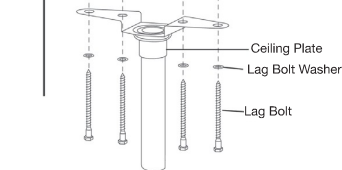


Step 5 Attaching TV to the Ceiling Mount

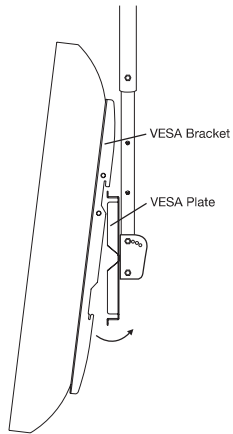

5.1

Install the TV to the mount by hanging the upper hook of the VESA Brackets onto the VESA plate as shown, then lower the TV to be parallel to the mount assembly so that the TV is fully supported by the mount.

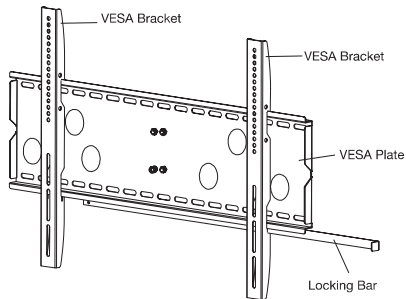

5.2

Slide the Locking bar through the bottom of the VESA Plate as pictured here until the pole is through both VESA Brackets. Use a lock of your preference through the hole on the opposite end to prevent the removal of the TV from the VESA Plate.

Visit us at **www.mount-it.com** for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.



support@mount-it.com

Available by phone **Monday - Friday** from **8:00am to 4:00pm** PST.



(855) 925-5668

Chat live with an agent on our website!



www.mount-it.com