


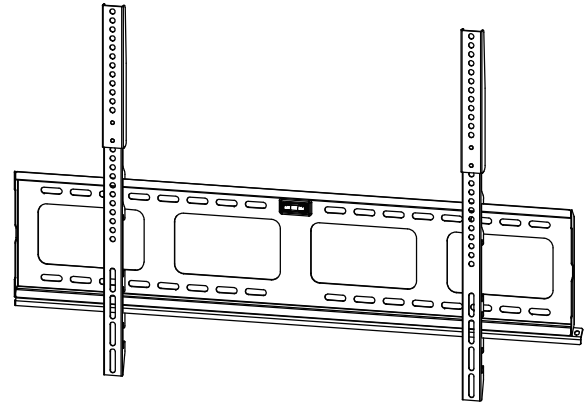

Scan this QR code for
product information, videos,
and assembly assistance.

Visit us at www.mount-it.com for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.



support@mount-it.com



(855)- 925-5668

Available by phone **Monday - Friday from 5:00am to 5:00pm** PST.



www.mount-it.com

Chat live with an agent on our website!

Low Profile TV Wall Mount



HAVE QUESTIONS?

Monday - Friday from 5:00am - 5:00pm PST



support@mount-it.com



(855) 925-5668



www.mount-it.com


- [illegible]

The image displays a variety of hardware components for TV mounting, organized into three main sections:

- Top Section:**
 - (1) Wall Plate-A: A rectangular plate with four mounting slots.
 - (2) VESA Bracket-B: A long, thin bracket with mounting holes.
 - (2) Monitor Bracket-C: A bracket with a central mounting point and side slots.
 - (1) Locking Bar-D: A long, thin bar with a locking mechanism.
 - (1) Wrench-E: A small, simple wrench.
- Middle Section (TV MOUNTING HARDWARE):**
 - (4) M5x12 Bolt M-A: A small bolt.
 - (4) M6x12 Bolt M-B: A small bolt.
 - (4) M8x12 Bolt M-C: A small bolt.
 - (4) M5x30 Bolt M-D: A medium-length bolt.
 - (4) M6x30 Bolt M-E: A medium-length bolt.
 - (4) M8x30 Bolt M-F: A medium-length bolt.
 - (4) M8x45 Bolt M-G: A long bolt.
 - (4) M6 Space M-H: A cylindrical spacer.
 - (8) M8 Space M-I: A cylindrical spacer.
 - (4) M5 Washer M-J: A small washer.
 - (4) M6 Washer M-K: A small washer.
 - (4) M8 Washer M-L: A small washer.
- Bottom Section (WALL MOUNTING HARDWARE):**
 - (6) M8x50 Lag Screw W-A: A long lag screw.
 - (6) Concrete Anchor W-B: A concrete anchor.
 - (6) Lag Screw Washer W-C: A washer for lag screws.

1




Mounting the Monitor Brackets to a TV with Flat Back

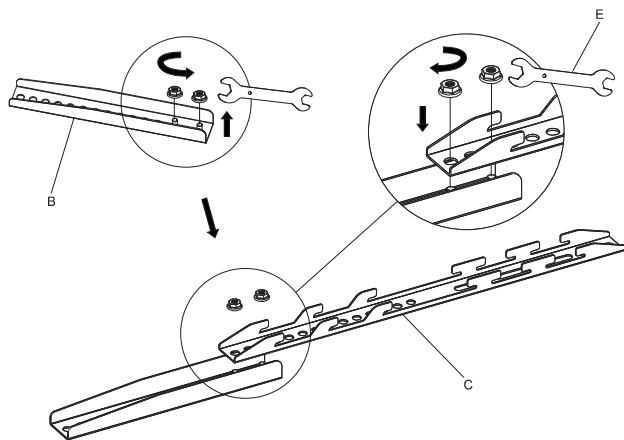TOOLS
REQUIRED

- Remove the Nuts from the Extenders (#B), place the Extenders on the ends of the VESA Brackets, then reinstall the nuts to secure them in place.

2a

INSTALLATION OPTION 1: Wood Stud Installation

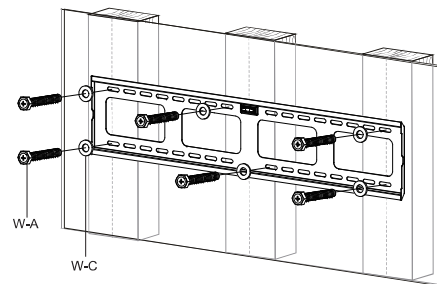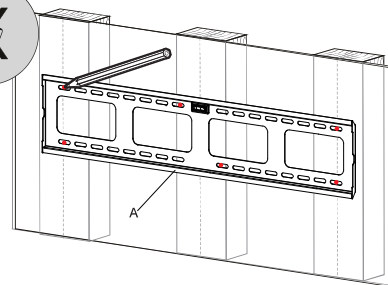TOOLS
REQUIRED

- With a stud finder locate the stud and center the mount on the stud at the desired height. Using a bubble level to ensure straightness, hold the Wall Plate (#A) to the wall and mark the center of the 4 mounting holes with a pencil as shown here.
- Use a 3/16" drill bit and drill on the marked locations to a depth of 2.2". Secure the Wall Plate (#A) to the wall using Lag Screws (#W-A) and Washers (#W-C). Tighten the screws until secure.




⚠ WARNING

- Tighten screws so that wall plate is firmly attached but do not overtighten. Overtightening can damage screws, greatly reducing their holding power.



2b INSTALLATION OPTION 2: Concrete/Brick Wall Installation

TOOLS
REQUIRED

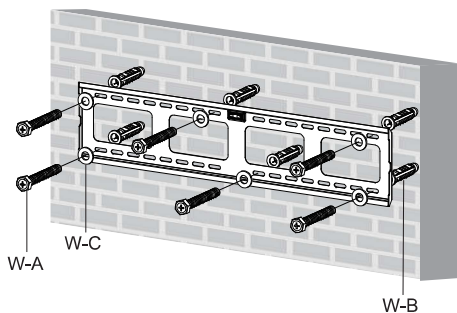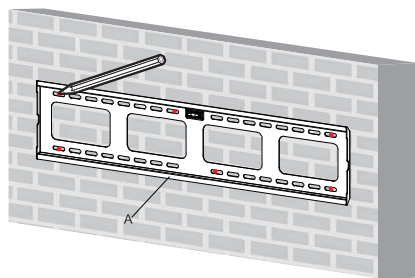


- Using a bubble level to ensure straightness, hold the Wall Plate (#A) to the desired location on the wall and mark the center of the 4 mounting holes with a pencil as shown here.
- Use a 3/8" drill bit and drill on the marked locations to a depth of 2.4". Clear any dust and debris from the holes and insert the Concrete Anchors (#W-B). Secure the Wall Plate (#A) to the wall using Lag Screws (#W-A) and Washers (#W-C). Tighten the screws until secure.


WARNING
• Tighten screws so that wall plate is firmly attached, but do not overtighten. Overtightening can damage screws, greatly reducing their holding power.




3 Installing the TV to the mount

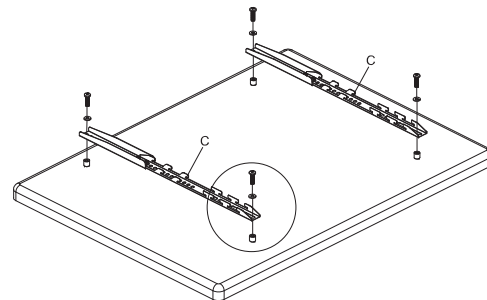


M-A/M-B/M-C

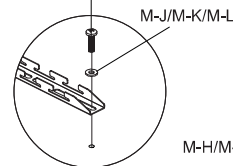


M-D/M-E/M-F

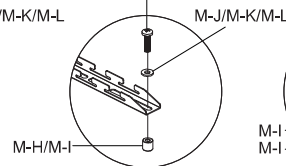

M-G

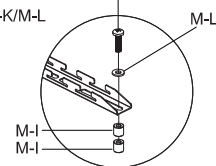

- Lay your TV down on a flat surface and align VESA Arms (#C) over the VESA holes as shown.
- Select the appropriate size mounting bolt (#M-A through M-G) and washer (#M-J, M-K, M-L) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your TV user manual or contact the TV manufacturer for sizing information. If necessary, use the included spacers (#M-H, M-I) between the mount and the TV to adjust the length of the mounting bolt. Multiple spacers can be used in combination to achieve the desired bolt depth. Attach the VESA Brackets using the selected hardware in the matching configuration shown here.

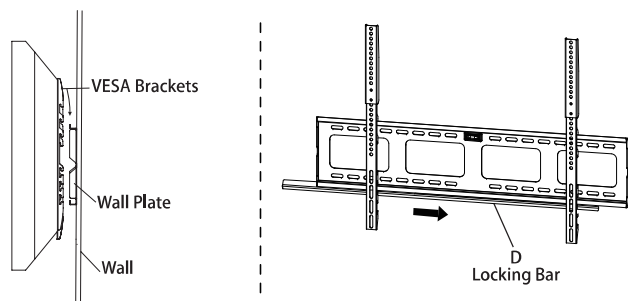

- Hook the TV onto the top of the Wall Bracket as shown here, then slowly swing the TV down until it is fully lowered. Slide the Locking Bar (#D) into place on the underside of the wall bracket as shown, so that the TV cannot be accidentally lifted off the wall.