

Scan this QR code for
product information, videos,
and assembly assistance.

Visit us at www.mount-it.com for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.



support@mount-it.com



(855)- 925-5668

Available by phone **Monday - Friday from 5:00am to 5:00pm** PST.



www.mount-it.com

Chat live with an agent on our website!

Clamp-on Keyboard Tray



HAVE QUESTIONS?

Monday - Friday from 5:00am - 5:00pm PST



support@mount-it.com



(855) 925-5668



www.mount-it.com

⚠️ 設置や組立を始める前に、すべての取扱説明書を一通りご覧ください。取扱説明書または警告に關してご不明な点がございましたら、お住まいの地域の代理店までお問い合わせください。

⚠️ 注意: 定められた使用目的・使用法を、不安定な状態にたり傷害を引き起こす恐れがあります。

- ・本製品は、設置・使用目的を遵守して使用してください。不適切な使用は、損傷や重大な身体傷害を引き起こす恐れがあります。
- ・安全装置、安全ロックなど安全に使用するための機能は、本製品は専門の知識を有する人が設置を行います。
- ・本製品は、木製スタンド構造、硬いコンクリート壁、またはレンガ壁等に設置するように設計されています。
- ・支持面の傾斜およびすべてのコンクリートのハードウェアの重量とコンポーネントを安全に変更するよう設計されています。
- ・本製品は取り外し可能なように設計されています。取り外し可能な部品は、安全な方法で取り外すようにしてください。
- ・本製品は飲み込みやすい小部品や危険性の高い小部品が含まれています。小さなお子様や手足の届かない場所に保管してください。
- ・本製品は屋内での使用を目的としています。本製品を屋外で使用すると、製品の不具合や身体傷害を導く恐れがあります。


重要: 設置または取り外し、構成要素のチャットリストに従ってすべての部品が安全に正しく組み立てられていることを確認してください。

※ 本製品は、お住まいの地域に特有の建築基準、安全基準、またはその他の地域の法規制に準拠して設計されています。

保管方法: 本製品は安全に保管する必要があります。定期的に（少なくとも3ヶ月に1回）点検してください。

Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct wall mounting and TV mounting hardware suitable for your installation.

DIMENSIONS & WEIGHT CAPACITY

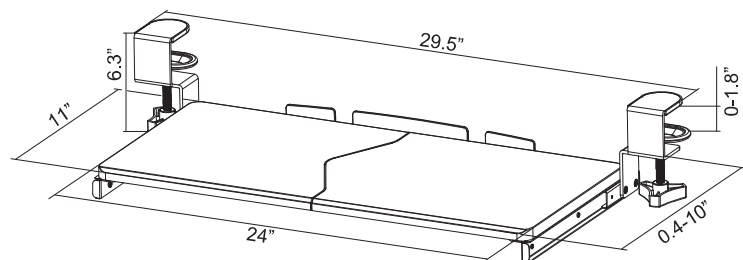


Rated weight capacity is 11lbs for this product.

Caution:

DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY. SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

1


Assemble the Keyboard Tray

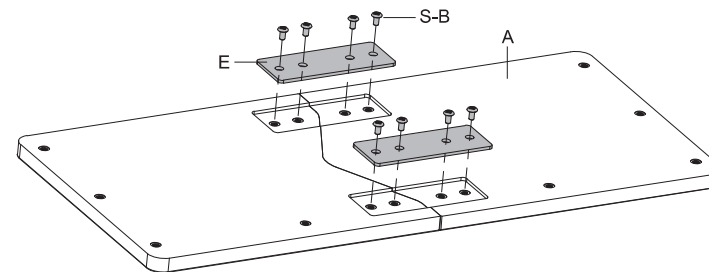


- Align the two halves of the **Keyboard Tray (#A)**.
- Position the **Connecting Plates (#E)** over the pre-drilled holes, ensuring proper alignment.
- Secure the plates to the tray using **M5x12mm Bolts (#S-B)** and tighten with a Phillips screwdriver. **Do not overtighten.**

2

Attach the Keyboard Stop

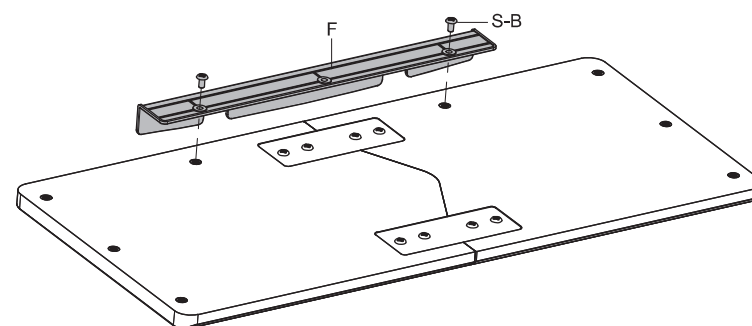


- Position the **Keyboard Stop (#F)** at the back edge of the **Keyboard Tray (#A)**, aligning it with the pre-drilled holes.
- Secure the stop to the tray using **M5x12mm Bolts (#S-B)** and tighten with a Phillips screwdriver. **Do not overtighten.**

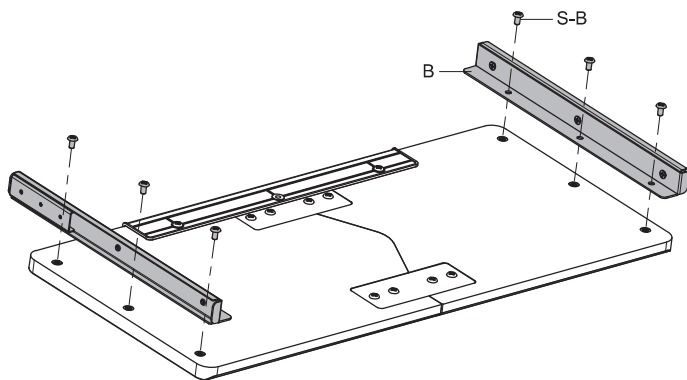


- With the **Keyboard Tray (#A)** still upside-down, align the **Sliding Brackets (#B)** with the pre-drilled holes on the **Keyboard Tray (#A)**.
- Ensure the bracket labeled "R" is positioned on the **left** side and the bracket labeled "L" is positioned on the **right** side of the assembly so that they are on the correct sides when flipped back over.
- Secure the brackets to the tray using **M5x12mm Bolts (#S-B)** and tighten with a Phillips screwdriver. **Do not overtighten.**

Verify that the **Sliding Brackets (#B)** protrude from the back of the **Keyboard Tray (#A)** as shown in the diagram.

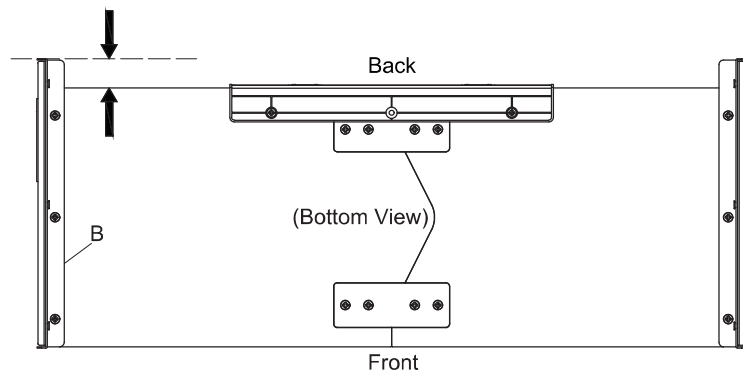

Choosing an Assembly Method


The **Keyboard Tray (#A)** can be assembled in two configurations depending on the desired extension distance.

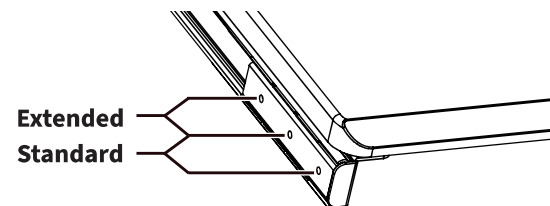

Standard

- The **Keyboard Tray (#A)** will extend **8.66" (22cm)** from the desktop edge when fully extended.

Note: Requires **12" (30.5cm) of clearance under the desk, free of obstacles, to allow the tray to fully retract.*

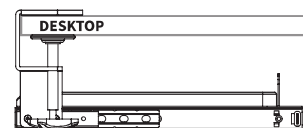


(Stored view)

Extended


- The **Keyboard Tray (#A)** will extend **9.84" (25cm)** from the desktop edge when fully extended.

- *Note:*
- In this position, the tray will remain partially extended from the edge of the desktop when fully retracted.
 - Requires **10.83" (27.5cm)** of clearance under the desk, free of obstacles, to allow the tray to fully retract.

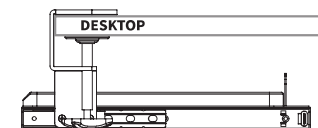


(Stored view)

- Attach the **Clamps (#C)** to the **Sliding Brackets (#B)** at your chosen position (Standard or Extended).
- Secure the clamps using **M4x6mm Bolts (#S-A)** and tighten with a Phillips screwdriver. **Do not overtighten.**

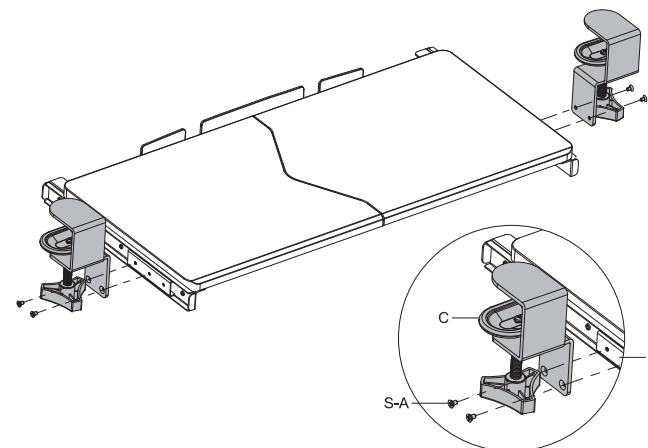


- Loosen the **Clamps (#C)** by turning the adjustment knobs counterclockwise.
- Insert the **Clamp Pads (#D)** onto the underside of each **Clamp (#C)** to protect the desk surface.
- Position the assembled **Keyboard Tray (#A)** at the edge of the desk.
- Tighten the **Clamps (#C)** by turning the adjustment knobs clockwise until secure.

Note: Ensure the clamps are perpendicular to the edge of the desk during and after tightening. Overtightening of the clamps may misalign the clamp/sliding brackets making it harder to extend and retract the keyboard tray.

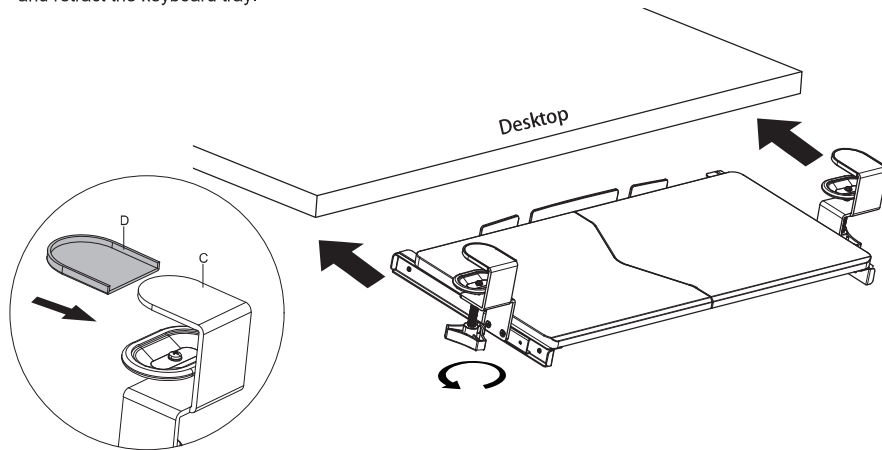

- The **Keyboard Tray (#A)** can slide forward and backward to the desired position.

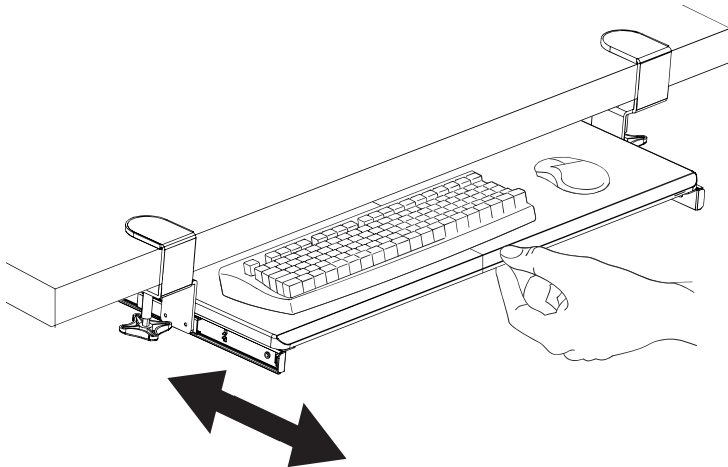

The tray will automatically lock in place at both the fully extended and fully stored positions.