
MOUNT-IT!

Installation Manual

SKU: MI-422

V1 04/26

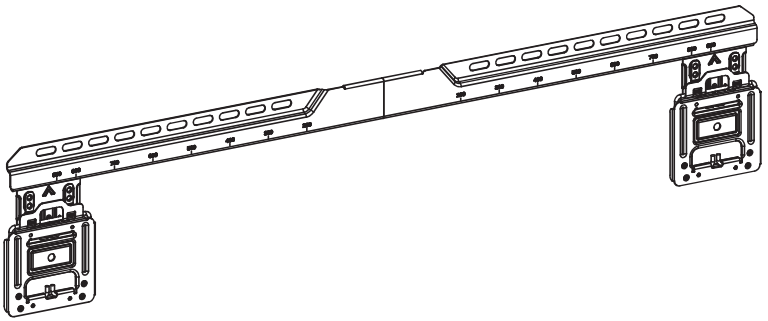

Scan this QR code for product information, videos, and assembly assistance.

Ultra-Slim Fixed TV Wall Mount, Large

HAVE QUESTIONS?

Monday - Friday from 5:00am - 5:00pm PST

support@mount-it.com

(855) 925-5668

www.mount-it.com

Thank you for choosing Mount-It!

EN Read the entire instruction manual before you start installation and assembly. If you have any questions regarding any of the instructions or warnings, please contact Mount-It! for assistance.

⚠ **CAUTION:** Use with products heavier than the rated weights indicated may result in instability causing possible injury.
- Please closely follow the assembly instructions. Improper installation may result in damage or serious personal injury.
- Safety gear and proper tools must be used. This product should only be installed by professionals.
- This product is designed to be installed on solid concrete walls, masonry walls or wood stud walls.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Use the mounting screws provided and DO NOT OVER TIGHTEN mounting screws.
- This product contains small items that could be a choking hazard if swallowed. Keep these items away from children.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.

IMPORTANT: Ensure that you have received all parts according to the component checklist prior to installation. If any parts are missing or faulty, contact Mount-It! for a replacement.

MAINTENANCE: Check that the product is secure and safe to use at regular intervals (at least every three months).

DE Lesen Sie die gesamte Bedienungsanleitung, bevor Sie mit der Installation und Montage beginnen. Wenn Sie Fragen zur Anleitung oder Warnungen haben, wenden Sie sich bitte an Ihren örtlichen Händler.

⚠ **VORSICHT:** Die Verwendung mit Produkten, die schwerer als die angegebenen Nennge wichte sind, kann zu Instabilität führen und zu möglichen Verletzungen führen.
- Bitte befolgen Sie die Montageanleitung genau. Eine unsachgemäße Installation kann zu Schäden oder schweren Verletzungen führen.
- Sicherheitsausrüstung und geeignete Werkzeuge müssen verwendet werden. Dieses Produkt sollte nur von Fachleuten installiert werden.
- Dieses Produkt ist auf massiven Betonwänden oder Mauerwerkswänden zu montieren.
- Stellen Sie sicher, dass die Auflagefläche das Gesamtgewicht des Geräts und aller angeschlossenen Hardware und Komponenten sicher trägt.
- Verwenden Sie die mitgelieferten Befestigungsschrauben und die Befestigungsschrauben NICHT ZU FEST ANZIEHEN.
- Dieses Produkt enthält Kleinteile, die beim Verschlucken eine Erstickungsgefahr darstellen können. Halten Sie diese Gegenstände von Kindern fern.
- Dieses Produkt ist nur für den Innenbereich bestimmt. Die Verwendung dieses Produkts im Freien kann zu Produktversagen und Verletzungen führen.

WICHTIG: Stellen Sie vor der Installation sicher, dass Sie alle Teile gemäß der Komponenten-Checkliste erhalten haben. Bei beschädigten oder fehlenden Teilen, wenden Sie sich an Ihre Verkaufsstelle, um Ersatz zu erhalten.

WARTUNG: Überprüfen Sie das Produkt in regelmäßigen Abständen auf Sicherheit und Stabilität (an besten alle drei Monate).

FR Lisez entièrement le guide d'utilisateur avant de commencer l'installation et le montage. Si vous avez des questions concernant les instructions ou les avertissements, veuillez contacter votre distributeur local pour une assistance.

⚠ **ATTENTION:** L'utilisation de produits plus lourds que les poids nominaux indiqués peut entraîner une instabilité causant des blessures potentielles.
- Les supports doivent être joints comme spécifié dans les instructions de montage. Une mauvaise installation peut entraîner des dommages ou de graves blessures aux personnes.
- Un équipement de sécurité et les outils appropriés doivent être utilisés. Ce produit devrait être installé uniquement par des professionnels.
- Ce produit est conçu pour être installé sur des murs avec poteaux en bois, des murs en béton massif ou murs en brique.
- Assurez-vous que la surface de soutien supporte en sécurité le poids combiné de l'équipement et de tous les matériaux et composantes associés.
- Utilisez les vis de montage fournies et NE SERREZ PAS TROP les vis de montage.
- Ce produit contient de petites pièces qui peuvent causer un étouffement si elles sont avalées. Éloignez ces pièces des enfants.
- Ce produit est prévu uniquement pour une utilisation à l'intérieur. L'utilisation de ce produit à l'extérieur peut entraîner une défaillance du produit ou des blessures aux personnes.

IMPORTANT: Avant l'installation, assurez-vous que vous avez reçu toutes les pièces selon la liste de vérification des composants. Si une pièce est manquante ou endommagée, téléphonez à votre distributeur local pour qu'il la remplace.

MAINTENANCE: A intervalles réguliers (au moins tous les trois mois) vérifiez que le support est d'utilisation sûre et fiable.

RU Перед началом установки и сборки прочитайте руководство по установке. Если у Вас возникли какие-либо вопросы относительно инструкций или предупреждений, свяжитесь с Вашим локальным распространителем для получения помощи.

⚠ **Внимание:** Использование продуктов, вес которых превышает указанный расчетный вес, может привести к неустойчивости и возможным травмам.
- Опоры должны быть установлены, как это показано в монтажных инструкциях. Неправильная установка может привести к получению серьезных травм.
- Необходимо использовать предохранительное устройство и специальные инструменты. Продукт должен устанавливаться только профессионалами.
- Продукт предназначен для установки на деревянные каркасные стены, твердые цементные стены или кирпичные стены.
- Убедитесь, что несущая поверхность выдержит вес всего установленного оборудования и комплектующих.
- Необходимо использовать монтажные винты, входящие в комплект поставки, и НЕ ПЕРЕТЯГИВАТЬ монтажные винты.
- Данный продукт содержит маленькие детали, которые представляют опасность удушения при проглатывании. Такие детали необходимо хранить в недоступном для детей месте.
- Данный продукт предназначен только для эксплуатации в помещениях. Использование данного продукта на улице может привести к поломке продукта и получению травм.

ВАЖНО: Перед установкой убедитесь, что Вы получили все детали в соответствии со списком комплектующих. Если не хватает каких-либо деталей или они повреждены, свяжитесь с Вашим местным распространителем по вопросу замены.

ТЕХНИЧЕСКОЕ ОБСЛУЖИВАНИЕ: Необходимо регулярно проверять (как минимум, раз в три месяца), чтобы кронштейн был зафиксирован, и его использование было безопасным.

ES Lea todo el manual de instrucciones antes de comenzar la instalación y ensamble de la unidad. Si tiene alguna inquietud con respecto a las instrucciones o advertencias, comuníquese con su distribuidor local.

⚠ **PRECAUCIÓN:** utilizar con productos de mayor peso al indicado en los límites de peso podría ocasionar inestabilidad y posibles heridas personales.
- Los soportes deben acoplarse tal como se indica en las instrucciones de ensamble. Una incorrecta instalación podría ocasionar daños y serias heridas personales.
- Utilice las herramientas y equipo de seguridad adecuados. Este producto solo debe ser instalado por profesionales.
- Este producto está diseñado para instalaciones en paredes de madera sólida, concreto sólido o bloques.
- Asegúrese de que la superficie de fijación sostenga de manera segura el peso total del equipo y todos sus componentes y hardware.
- Utilice los tornillos de ensamble suministrados y NO aplique demasiada tensión a los tornillos.
- Este producto contiene piezas pequeñas que representan un riesgo de asfixia. Mantenga estas piezas fuera del alcance de los niños.
- Este producto está diseñado para uso en interiores solamente. Utilizar este producto en exteriores podría ocasionar fallas y heridas personales.

IMPORTANTE: Asegúrese de que haya recibido todas las piezas según la lista de verificación de componentes para la instalación. Si falta alguna de las partes, o está dañada, comuníquese con su distribuidor.

MANTENIMIENTO: Compruebe periódicamente que el soporte esté asegurado y listo para usar (al menos cada tres meses).

PT Leia todo o manual de instruções antes de iniciar a instalação e montagem. Se você tiver alguma dúvida sobre quaisquer uma das instruções ou avisos, por favor, entre em contato com o seu distribuidor local para assistência.

⚠ **ATENÇÃO:** O uso com produtos mais pesados do que os pesos indicados pode resultar em instabilidade, causando possíveis danos.
- Os suportes devem ser anexados como especificado nas instruções de montagem. A instalação incorreta pode causar danos ou sérias lesões pessoais.
- Equipamentos de segurança e ferramentas adequadas devem ser utilizadas. Este produto só deve ser instalado por profissionais.
- Este produto é projetado para ser instalado em painéis verticais de paredes de madeira, paredes de concreto sólido ou de blocos.
- Certifique-se que a superfície de suporte suportará com segurança o peso combinado do equipamento e todas as ferragens e componentes anexados.
- Use os parafusos de montagem fornecidos e NÃO APERTE EXCESSIVAMENTE os mesmos.
- Este produto contém pequenas peças que podem causar asfixia se ingeridas. Mantenha esses itens longe do alcance de crianças.
- Este produto destina-se somente para uso interno. Usá-lo em ambiente externo pode causar falhas no produto e lesões pessoais.


IMPORTANTE: Assegure-se que você recebeu todas as peças, de acordo com a lista de componentes, antes da instalação. Se alguma peça estiver faltando ou é defeituosa, contate o seu distribuidor local para substituição.

MANUTENÇÃO: Certifique-se que o suporte seja seguro e protegido para o uso em intervalos regulares (pelo menos a cada três meses).






Mount and Accessories

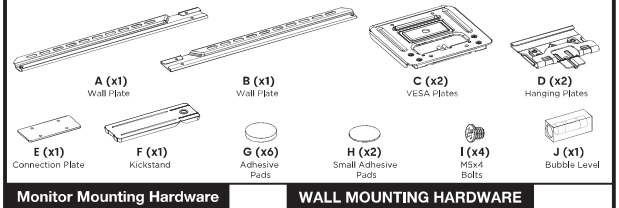

Monitor Mounting Hardware

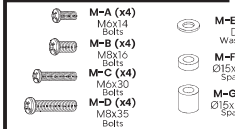

WALL MOUNTING HARDWARE




Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct mounting hardware suitable for your installation.


CHOKING HAZARD. Package includes small parts.
Not for children under 3 years. Adult supervision is required.

Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.

DIMENSIONS & WEIGHT CAPACITY

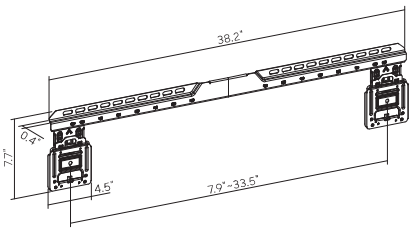


Rated weight capacity is 165lbs/75kgs for the mount
Caution:
Ensure all mounting surfaces are capable of holding the weight of your mount.
DO NOT EXCEED MAXIMUM LISTED WEIGHT CAPACITY.
SERIOUS INJURY OR PROPERTY DAMAGE MAY OCCUR!

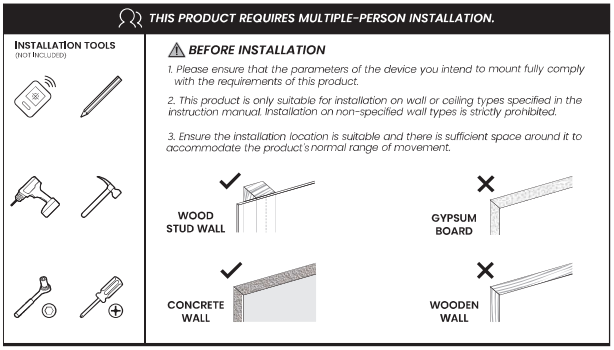

Step 1

Attach Hanging Plates


• Slide the Hanging Plates (#D) onto each Wall Plate (#A, #B) as shown.
• Ensure the Hanging Plates (#D) are oriented correctly, matching the direction indicated in the illustration.

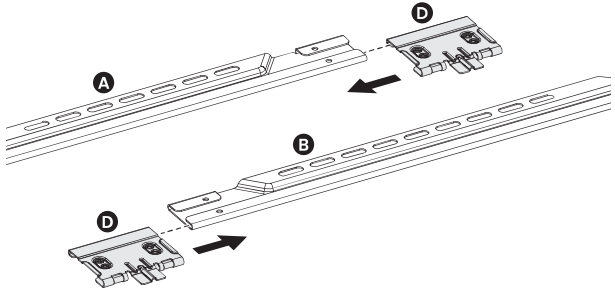

Step 2

Connect Wall Plates

• Slide the Connection Plate (#E) into the ends of the Wall Plates (#A, #B) and secure them together using the M5x4 Bolts (#I).

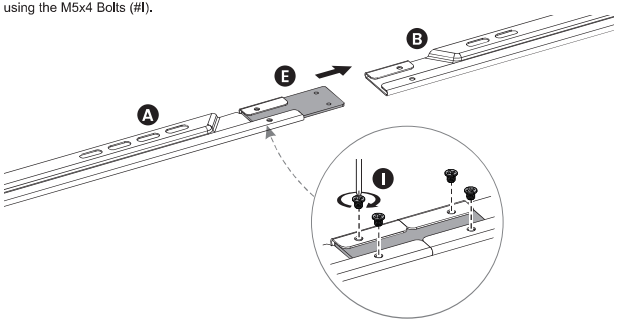


Step 3

Measure VESA Hole Spacing

• Locate the top mounting holes on the back of your TV and measure the horizontal distance (X) between them in millimeters (mm).

Note: *Measure the VESA mounting hole spacing on the TV.*

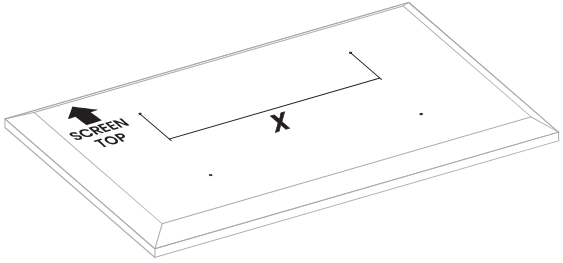


Step 4a


Wood Stud Wall Installation (≤600 mm VESA Width)


• Use a stud finder to locate two stud centers. Position the assembled Wall Plates (#A, #B) on the wall at the desired height. Using the Bubble Level (#J), ensure the mount is level and mark the center of the mounting holes with a pencil.
• Use a 3/16" (Ø4.5 mm) drill bit and drill on the marked locations to a depth of 2.2" (55 mm).
• Secure the Wall Plates (#A, #B) to the wall using the ST6.3x55 Lag Screws (#W-A) and D8 Washers (#W-C). Tighten the screws until secure.

WARNING: Install only into wood studs. Do not use Concrete Anchors (#W-B) for this installation.

• Applicable to wood stud spacing of **457 mm** or **610 mm**.
• Applicable to **406 mm** wood stud spacing when VESA spacing is **≤ 600 mm**.

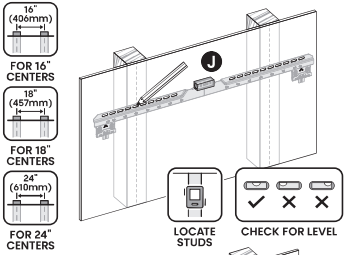

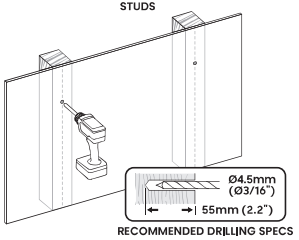

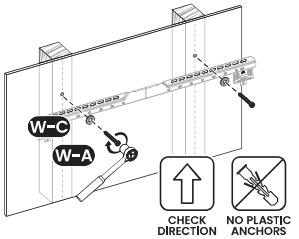


Step 4b


Wood Stud Wall Installation (>600 mm VESA Width)


• Use a stud finder to locate three stud centers. Position the assembled Wall Plates (#A, #B) on the wall at the desired height. Using the Bubble Level (#J), ensure the mount is level and mark the center of the mounting holes with a pencil.
• Use a 3/16" (Ø4.5 mm) drill bit and drill on the marked locations to a depth of 2.2" (55 mm).
• Secure the Wall Plates (#A, #B) to the wall using the ST6.3x55 Lag Screws (#W-A) and D8 Washers (#W-C). Tighten the screws until secure.

WARNING: Install only into wood studs. Do not use Concrete Anchors (#W-B) for this installation.

• Applicable to **406 mm** wood stud spacing when VESA spacing is **> 600 mm**.

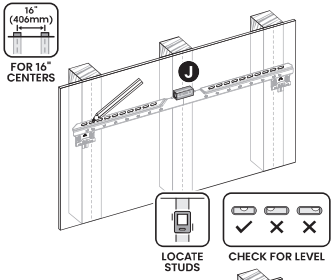

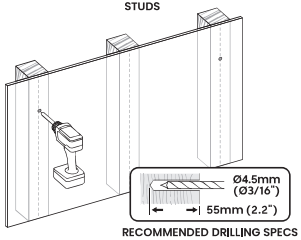

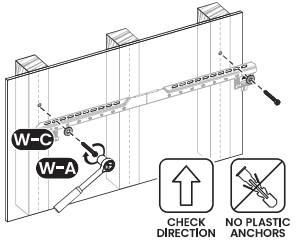



Step 4c


Concrete/Brick Wall Installation

• Using the Bubble Level (#J) to ensure straightness, hold the assembled Wall Plates (#A, #B) to the desired location on the wall and mark the center of the mounting holes with a pencil.

• Use a 3/8" (Ø10 mm) drill bit and drill on the marked locations to a depth of 2.4" (60 mm). Clear any dust and debris from the holes and insert the Concrete Anchors (#W-B). Secure the Wall Plates (#A, #B) to the wall using the ST6.3x55 Lag Screws (#W-A) and D8 Washers (#W-C). Tighten the screws until secure.

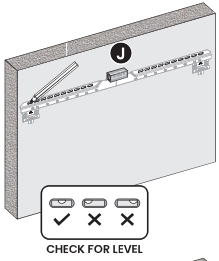

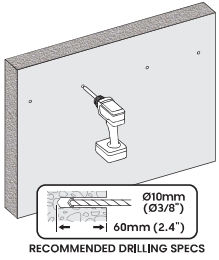

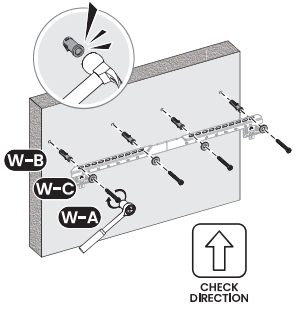

Step 5


Adjust Hanging Plates to VESA Width

• Slide the Hanging Plates (#D) along the Wall Plates (#A, #B) to match the VESA hole spacing measured in Step 3.

• Use the measurement scale on the Wall Plates to position the Hanging Plates (#D). Align the arrow on each Hanging Plate with the corresponding measurement line to ensure proper centering.

NOTE: The scale on the Wall Plates indicates VESA hole spacing in millimeters (mm). Ensure the selected position matches your TV's VESA measurement.

Note: *Adjust the position of Brackets* **D** *according to the VESA hole spacing on the TV.*

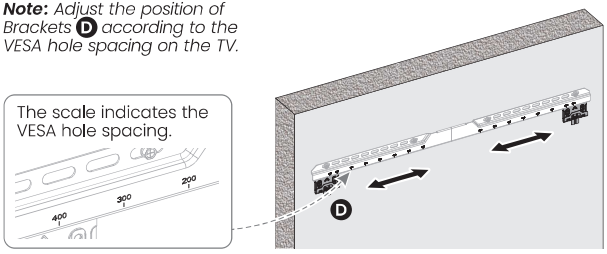

Step 6


Attach VESA Plates and Kickstand


• Select the appropriate size mounting bolts (#M-A, #M-B, #M-C, #M-D) and washers (#M-E) for your TV's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size, refer to your TV manual or contact the manufacturer.


• Install the VESA Plates (#C) onto the upper mounting holes on the back of the TV in the orientation shown, using the selected bolts and washers. If needed, use the Spacers (#M-F, #M-G) to accommodate curved backs or recessed mounting holes.


• Attach the Kickstand (#F) to one of the lower mounting holes on the back of the TV using appropriate hardware, as shown.

NOTE: Install the Kickstand (#F) on the side of the TV where your HDMI or input ports are located for easier access after installation.

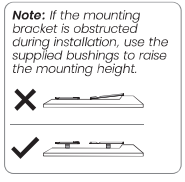

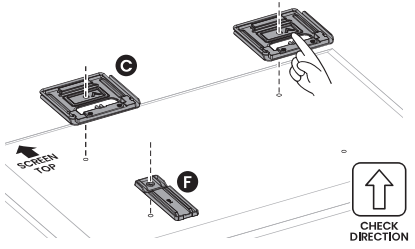

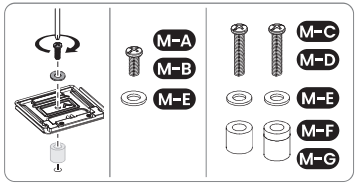

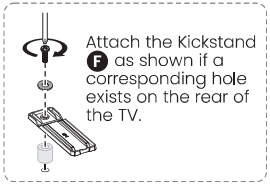

Attach the Kickstand (F) as shown if a corresponding hole exists on the rear of the TV.

⚠ CAUTION


To ensure a safe installation, please pay close attention to screw selection and installation method:

Always use screws of the correct length and specification as specified in your TV's manual or advised by the manufacturer.


Screws Too Long: *May damage internal components of the TV.*

Screws Too Short: *May fail to secure the TV properly, posing a risk of falling.*

When installing, ***AVOID OVER-TIGHTENING*** *the screws to prevent stripping or damaging the mounting holes.*

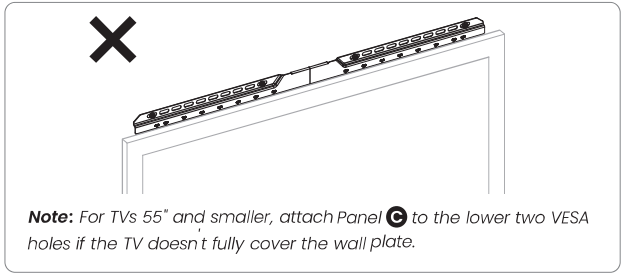

Note: *For TVs 55" and smaller, attach Panel (C) to the lower two VESA holes if the TV doesn't fully cover the wall plate.*

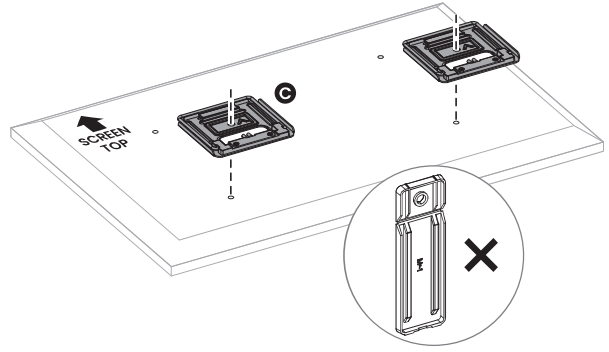


Step 7
Hang TV onto Wall Mount

• Pull the metal bars on each of the VESA Plates (#C) outward from the TV. Then lift the TV and hook the VESA Plates onto the Hanging Plates (#D). Ensure both VESA Plates (#C) are fully seated into the Hanging Plates (#D).

⚠ CAUTION


Before hanging the TV, make sure the wall plate is securely installed to prevent personal injury or product damage.

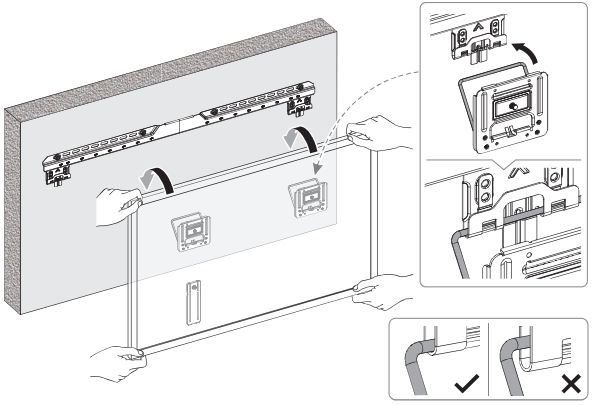

Step 8
Secure TV Against Wall

• Carefully push the TV toward the wall until it sits flush. The metal bars on the VESA Plates (#C) will fold back into place against the back of the TV.

Note: *Carefully lean the TV against the wall.*

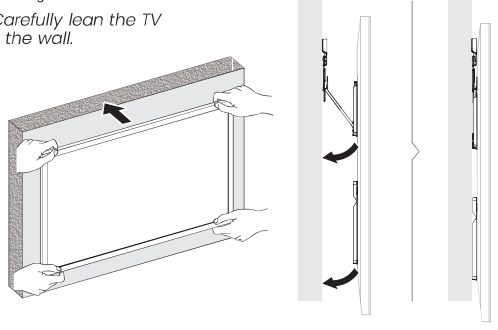


Step 9

Adjust TV Position and Access Rear

• To access cables or the back of the TV, gently pull the bottom of the TV away from the wall and prop it up using the Kickstand (#F).

• To ensure the TV sits vertically parallel to the wall, attach the Adhesive Pads (#G) or Small Adhesive Pads (#H) to the back of the TV as needed to fill any gap.


NOTE: Apply the appropriate combination of Adhesive Pads (#G, #H) based on the measured distance to achieve a level, flush alignment.

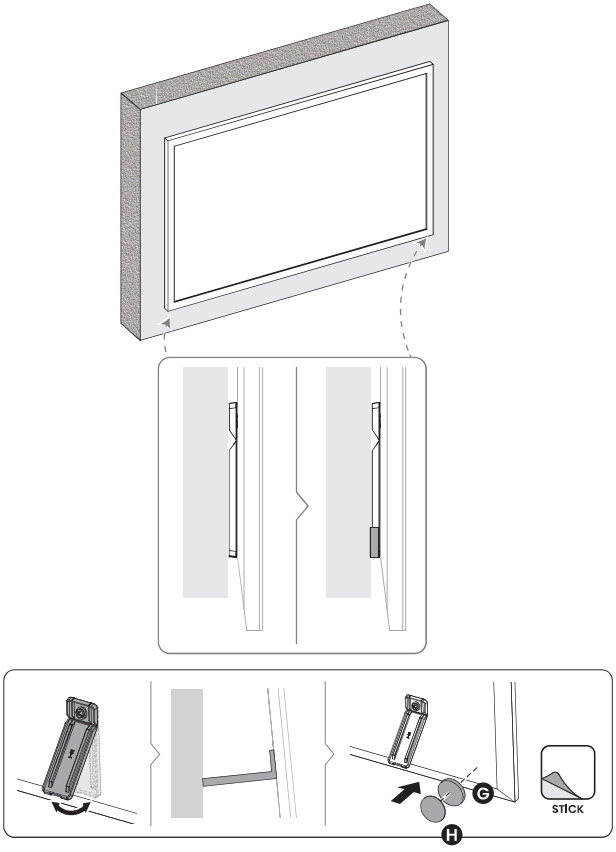

Step 10

Remove TV from Wall Mount

• Pull the bottom of the TV away from the wall to disengage the metal bars on the VESA Plates (#C). Then lift the TV upward to unhook the VESA Plates from the Hanging Plates (#D).

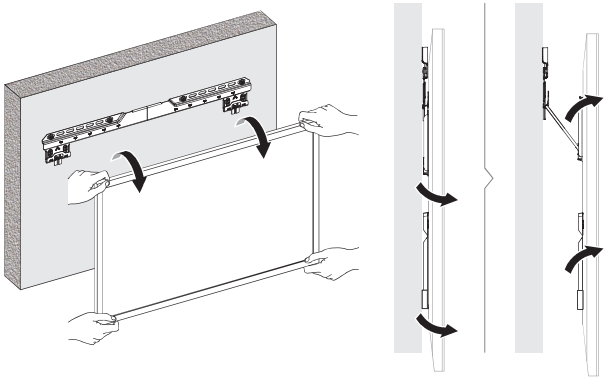

Visit us at **www.mount-it.com** for product registration and warranty information.

Our US based customer service team is standing by to answer any questions you have about your Mount-It! product.

Available by phone **Monday - Friday from 5:00am to 5:00pm** PST.

Chat live with an agent on our website!



support@mount-it.com



(855) 925-5668



www.mount-it.com