


Mount and Accessories

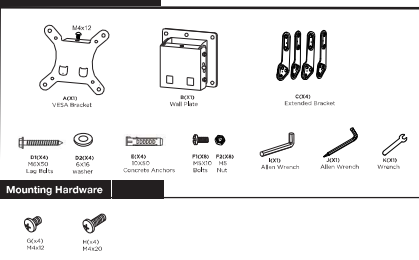


Check carefully to make sure there are no missing or defective parts. Some hardware provided may not be used. Use the correct mounting hardware suitable for your installation.

CHOKING HAZARD. Package includes small parts. Not for children under 3 years. Adult supervision is required.

Missing Parts? Call us at (855) 925-5668 and we will ship replacement parts free of charge.


DIMENSIONS & WEIGHT CAPACITY

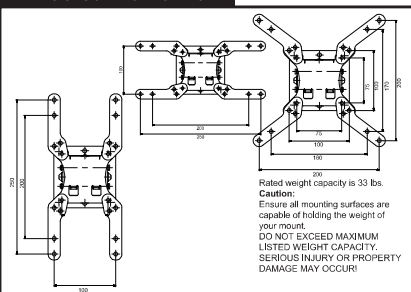

Step 1

Split the VESA Bracket and Wall plate


- Split the VESA Bracket (#A) and Wall plate (#B).



Step 2a

Wood Stud Mounting Option


- With a stud finder locate the stud and center the Wall Plate (#B) on the stud at the desired height. Using a bubble level to ensure straightness, hold the Wall Plate to the wall and mark the center of the 2 mounting holes with a pencil.
- Use a 3/16" drill bit and drill on the marked locations to a depth of 2.4". Secure the Wall Plate (#B) to the wall using the Lag Screws (#D-1) and Washers (#D-2). Tighten the screws until secure.

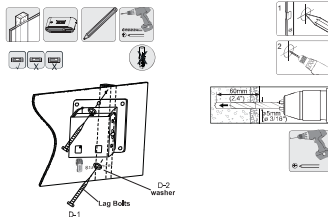

Step 2b

Concrete/Brick Mounting Option


- Using a bubble level to ensure straightness, hold the Wall Plate (#B) to the desired location on the wall and mark the center of the 2 mounting holes with a pencil.
- Use a 3/8" drill bit and drill on the marked locations to a depth of 2.4". Clear any dust and debris from the holes and insert the Concrete Anchors (#E). Secure the Wall Plate (#B) to the wall using the Lag Screws (#D-1) and Washers (#D-2). Tighten the screws until secure...

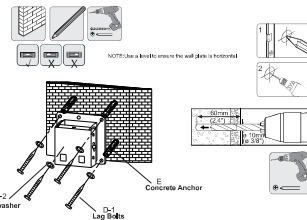

Step 3

Assemble the VESA Bracket

- For VESA patterns greater than 100x100, attach the VESA Extenders (#C) to the front of the VESA Bracket (#A) in one of the orientations shown here using the Bolts (#F-1) and Nuts (#F-2).

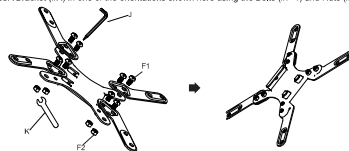

Step 4

Attach the VESA Plate to the TV

- Select the appropriate size mounting bolt (#G,H) for your display's mounting holes and verify the length of the VESA bolt is not too long. If you are unsure of the correct bolt size for your display refer to your display's user manual or contact the display's manufacturer for sizing information. Attach the VESA Bracket (#A) to the TV using these selected bolts then tighten until secure. Do not overtighten.

